



MaxiDAS_Acura_V4.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Unit	ECU Infor	Read codes	Erase Codes	Data List	Freeze Data	Function Test	Special Function
PGM-FI	●	●	●	●	●	●	30, 31, 38, 39, 45, 62, 79, 109
DIESEL	●	●	●	●	●	●	02, 29, 37, 53, 54, 55, 52, 61, 79, 86
A/T	●	●	●	●	●	○	13, 26, 27, 48, 60, 70, 85, 91, 92
CVT	●	●	●	●	●	○	21, 22, 50, 91, 93, 94, 95, 96, 100
ABS	●	●	●	●	※	○	06, 12, 63, 66, 68, 72, 99, 105, 111, 112
SRS	●	●	●	●	○	●	69, 103
EPS	●	●	●	●	●		01, 40, 43, 71, 101, 108
PUH	●	●	●	●			113
IMA	●	●	●	●	●		98, 64
IMMOBI	○	○	○	●	○	○	05, 80, 79, 84, 57, 104
SMART_ENTRY	●	●	●	●	○	○	97, 56, 82, 83
EVPS	●	●	●	●	●	○	
CMS	●	●	●	●	●	○	73, 28
ACM	●	●	●	●	●	●	
TPMS	●	●	●	●		○	89, 106
SH-AWD	●	●	●	●	●	○	93, 04, 36, 24, 35, 115, 101, 10, 51
VTM	●	●	●	●	●	○	51, 25
LKAS_CAMERA	●	●	●	●	●	○	
LKAS_CONTROL	●	●	●	●	●	○	102, 33
iNVS	●	●	●	●	●	○	20, 74, 114
SMART_PARKING	●	●	●	●	●	○	110
IHCC	●	●	●	●	●	○	03, 09, 16, 17, 18, 19, 28, 47, 49, 59, 73, 107
HYDRBST	●	●	●	●	○	○	46, 44, 07



MaxiDAS_Acura_V4.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Unit	ECU Infor	Read codes	Erase Codes	Data List	Freeze Data	Function Test	Special Function
ARC	●	●	●	●	●	○	34
4WS	●	●	●	●	●	●	67, 65, 41, 42, 75, 76
DBW	●	●	●	●	●	●	
ATTS	●	●	●	●	●	○	14, 101, 58, 11
i-SHIFT	●	●	●	●	○	○	
RCS	○	○	○	○	○	○	104, 78, 77
BODY	●	●	●	●		●	
BSI	●	●	●	●		●	
EPB	●	●	●	●			88
MVCS	●	●	●	●		●	15, 08, 32, 33
PCU	●	●	●	●			87
SVT	●	●	●	●		●	90, 81, 23

Special Function

ID	Function
01	A/C fan minimum
02	A/F Sensor 1 Learning Clear
03	ACC RELAY
04	Acceleration Device Test
05	Add and Delete Keys
06	Adjustment All Sensors
07	Adjustment Memorizing 0[zero] position
08	AIMING DATA TRANSFER
09	Alarm buzzer
10	ALL Sensor
11	ALL SENSORS
12	Apply/Dump Solenoid
13	ATFP motor test
14	ATTS TEST SHORT TIME MODE
15	AUTO MULTI CAMERA AIMING
16	BRAKE ACTUATOR 3
17	Brake booster1
18	Brake booster2
19	Buzzer check
20	Camera aiming
21	CAS solenoid A (LF)
22	CAS solenoid B (RF)
23	Change Mode
24	Clutch Coil Test
25	Clutch electromagnetic coil test
26	Clutch pressure control (Linear) Solenoid Valve
27	Clutch pressure control solenoid valve control
28	CMBS brake
29	Compression test
30	CRANK(CKP) PATTERN CLEAR
31	CRANK(CKP) PATTERN LEARNNING
32	Customization Set to Default
33	Customize
34	Damper Stroke Calibration
35	Differential Torque
36	Direct electromagnetic clutch Test
37	DPF Differential pressure sensor initial learn
38	ECM/PCM Reset
39	ETCS(TAC) TEST
40	Frequency change
41	FRONT MAIN SENSOR NEUTRAL CHECK
42	FRONT SUB SENSOR NEUTRAL CHECK
43	Gear ratio sensor
44	Hydraulic booster CAS
45	IDLE ADJUST
46	Increasing Master Cylinder pressure

Special Function

ID	Function
47	INDICATOR LIGHT
48	Indicator test
49	Information display
50	Inhibitor Solenoid
51	Initialization
52	Injector Test
53	IQA data status
54	IQA write data
55	ISV Forced Learning
56	Keyless Remotes
57	Keyless Transmitter Registration
58	LATERAL G & YAW RATE SENSORS
59	Light check
60	Lockup solenoid test
61	MAF Sensor Learning Clear
62	Main Fuel Tank Alcohol Content Write Data
63	Mode Clear
64	Motor rotor position calibration
65	NEUTRAL ADJUSTMENT
66	Neutral Rewrite
67	NEUTRAL REWRITING
68	Neutral Test
69	OPDS initialization
70	Pressure test assistance mode
71	PS signal
72	Pulser test
73	Radar aiming
74	Read camera parameters
75	REAR MAIN SENSOR NEUTRAL CHECK
76	REAR SUB SENSOR NEUTRAL CHECK
77	REGISTER NEW TRANSMITTER
78	REGISTER REMOTE CONTROL ENGINE STARTER UNIT
79	Replace ECM/PCM
80	Replace Immobilizer Receiver/Control Unit
81	Replace internal Battery
82	Replace Keyless Access ECU
83	Replace Knob ignition
84	Replace MPCS/MICU/IMOES
85	Replace TCM/PCM
86	Reset 'Calculated PM valve'
87	Self Check
88	Sensor Calibration
89	Sensor ID learning
90	Set Maintenance Mode
91	Shift lock solenoid test
92	Shift solenoid

Special Function

ID	Function
93	Shift solenoid test
94	Shift solenoid Valve A
95	Shift solenoid Valve B
96	Shift solenoid valve O/P
97	Smart information
98	SOC REWRITE
99	Solenoid test
100	Start clutch feedback learn
101	Steering angle sensor
102	Steering rewrite
103	SWS initialization
104	System Check
105	TCS test
106	Threshold rewriting
107	Throttle opening angle
108	Torque Sensor Learn
109	TP POSITION CHECK
110	Voice guide output test
111	VSA test
112	VSA-TCS control valve
113	WARNING DISPLAY FORCE ACTIVATION
114	Write camera parameters
115	YAW Rate/Lateral Acceleration Sensor