- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

System Name	Vehicle Information	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
SRS Airbag	•	•	•	*	0	0	*
BODY	•	•	•	*	0	*	*
BODY2	•	*	*	*	0	*	0
BODY3	•	*	*	*	0	*	0
BODY4	•	•	•	•	0	•	0
BODY5	•	*	*	•	0	•	0
Immobiliser	•	•	•	•	0	*	*
Tvss	•	•	•	•	0	•	0
Entry&Start	•	•	•	•	0	•	•
Occupant Detection	•	•	•	•	0		•
D-SEAT SW	•	*	*	•	0	*	0
AFS	•	•	•	•	0	•	0
Pre-Crash	•	•	•	•	0	•	0
D-Door Motor	•	•	•	•	0	•	0
Theft Deterrent	•	•	•	•	0	•	0
Air Conditioner	•	•	•	•	0	•	0
Combination Meter	•	*	*	•	0	•	0
Back Door	•	•	•	•	0	•	0
Driver Seat	•			•	0	•	0
Tilt&Telescopic	•	•	•	•	•	•	0
Mirror	•			•	0	•	0
Gateway	•	•	•		0		*
Passenger Door	•	*	*	•	0	•	0
Rear left Door	•	•	•	•	0	•	0
Rear right door	•	•	•	•	0	•	0
Sliding Roof	•	*	*	•	0	•	0
Driver Door	•	*	*	•	0	•	0

- This function is supported.
- O This function is not supported.
- imes This function may be supported, which depends on the actual condition of the vehicle.

System Name	Vehicle Information	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Master Switch	•	•	•	•	0	*	0
Rear Right Seat	•	*	*	•	0	•	0
Rear Left Seat	•	*	*	•	0	•	0
Rear Seat Switch	•			•	0	0	0
Steering Pad Switch	•			•	0	0	0
Clearance Sonar	•	•	•	•	0	•	0
Rain Sensor	•	*	*	•	0	0	0
Wiper	•			•	0	•	0
Combination Switch	•			•	0	0	0
Steering Lock	•	•	•	•	0	•	•
Passenger Seat	•			•	0	•	0
Retractable Hardtop	•	•	•	•	0	0	0
Main Body	•	•	•	•	0	•	•
P-Door Motor	•	•	•	•	0	•	0
RL-Door Motor	•	•	•	•	0	•	0
RR-Door Motor	•	•	•	•	0	•	0
HV Gateway	•	•	•	•	0	0	•
Night View	•	•	•	•	0	•	•
HL Autoleveling	•	•	•	•	0	•	•
ECM Gateway	•	•	•	•	0	0	•
ECB Gateway	•	•	•	•	0	0	•
WIL Gateway	•	•	•	•	0	0	•
Center Console Switch	•			•	0	•	•
Rear Console Switch	•	•	•	•	0	•	0
Front Left Seat A/C	•	•	•	•	0	•	0
Front Right Seat A/C	•	•	•	•	0	•	0
Rear left Seat A/C	•	•	•	•	0	•	0

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

System Name	Vehicle Information	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
Rear Right Seat A/C	•	•	•	•	0	•	0
Electric Power Control	•	•	•	•	•	•	0
Active Headrest R	•	•	•	•	0	•	0
Active Headrest L	•	•	•	•	0	•	0
Pre-Crash 2	•	•	•	•	*	0	0
Accessory Gateway	•	•	•	•	0	0	0
MIRROR R	•	*	*	•	*	•	0
MIRROR L	•	•	•	•	•	•	0
Navigation System	•	•	•		0	0	0
PM1 Gateway	•	•	•	•	0	0	0
Charging Control	•	•	•	•	0	•	0
Starting Control	•	•	•	•	0	•	0
PM2 Gateway	•	•	•	•	0	0	0
Remote Engine Starter	•	•	•	•	0	0	0
Gateway BEAN	•	•	•		0	0	0
Gateway CAN	•	•	•		0	0	0
Back DoorPW	•	•	•	•	0	•	0
Transmission Control	•	•	•	•	•	0	0
Parking Assist Monitor System	•	•	•	•	0	•	0
Power Source Control	•	•	•	•	0	•	0
Engine	•	•	•	•	*	•	*
ECT	•	•	•	•	*	•	*
ABS	•	•	•	•	•	•	•
EMPS	•	•	•	•	•		•
Free-Tronic	•	•	•	•	•	•	•
Air suspension	•	•	•	•	0	•	*
AHC	•	•	•	•	0	•	*

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

System Name	Vehicle Information	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
VGRS	•	•	•	•	•	0	•
EMS	•	•	•	•	0	•	
Tire Pressure Monitor	•	•	•	•	0	0	•
EHPS	•	•	•	•	•	0	0
Four Wheel Drive	•	•	•	•	0	•	0
Stabilizer	•	•	•	•	0	0	•
Intelligent Parking Assist	•	•	•		0	0	0
Electric Parking Brake	•	•	•	•	0	•	•
Lane Keeping Assist	•	•	•	•	•	0	0
Front Stabilizer	•	•	•	•	0	•	0
Rear Stabilizer	•	•	•	•	0	•	0
ENGINE AND ECT	•	•	•	•	*	•	•
Cruise Control	•	•	•	•	0	0	0
ENGINE (LH Bank)	•	•	•	•	•	•	•
ENGINE (RH Bank)	•	•	•	•	•	•	•
HV Battery	•	•	•	•	•	•	*
Hybrid Control	•	•	•	•	*	•	•
Sequential M/T	•	•	•	•	•	•	•
Multi-Mode M/T	•	•	•	•	*	•	•
Stop And Go	•	•	•	•	•	•	*
Radar Cruise	•	•	•	•	0	0	*
Laser Cruise	•	•	•	•	0	0	*
E-ACM	•	•	•	•	0	•	0
Telematics	•	•	•	•	0	0	0
PPS	•	•	•	•	0	0	•
Advanced Parking Guidance System	•	•	•	•	0	0	0
FC	•	•	•	•	0	•	•

- This function is supported.
- O This function is not supported.
- * This function may be supported, which depends on the actual condition of the vehicle.

System Name	Vehicle Information	Read Codes	Erase Codes	Live Data	Freeze Frame	Active Test	Special Function
FCHV	•	•	•	•	0	•	•
EV	•	•	•	•		•	•
Battery	•	•	•	•	•	•	0