

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
AVANTIME	A. B. S.	●	●	●	●	●	○	●	0160, 0047, 0159, 0348, 1164, 1165
AVANTIME	AIR CONDITIONING	●	●	●	●	●	●	●	1195, 1196, 1197, 1198, 1199, 1200
AVANTIME	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0356, 0357, 0049, 0045, 0046, 0047, 0048
AVANTIME	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
AVANTIME	CONNECTION UNIT								
AVANTIME	DISCHARGE LAMP	●	●	●	●	○	○	●	
AVANTIME	HEATER	●	●	●	●	●	○	●	
AVANTIME	IMMOBILISER								
AVANTIME	INJECTION	●	●	●	●	●	※	●	0003, 0048, 0301, 0300, 1077, 1078, 1046, 1047, 0668, 0676, 1088, 1089, 1090, 1091, 0381
AVANTIME	INSTRUMENT PANEL								
AVANTIME	LIGHTING	●	●	●	●	○	○	●	
CLIO 2	A. B. S.	●	●	●	●	※	※	●	0047, 0160, 0162, 0159, 0048
CLIO 2	AIR CONDITIONING	●	●	●	●	●	○	●	1176, 1177, 1178, 1179, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1191, 1192, 1193
CLIO 2	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0066, 1137, 1138, 0353, 0354, 0355, 0047
CLIO 2	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	0174, 1045, 1046, 1047, 0360, 0173, 0359, 0171
CLIO 2	CONNECTION UNIT	●	●	●	●	※	※	●	
CLIO 2	GAS INJ.	●	●	●	●	●	※	●	0048
CLIO 2	IMMOBILISER	●	●	●	●	○	○	●	1050, 1060, 1052, 1053
CLIO 2	INJECTION	●	●	●	●	※	●	●	0244, 0245, 1067, 1068, 0301, 0300, 0003, 1172, 1173, 0048, 0537, 1069, 1070, 1047, 1071, 1072, 1046, 0371, 0381, 0370, 0669, 0005, 0668, 0053, 1082, 0008, 0671, 0289, 0297, 0298, 0299
CLIO III	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0160, 0048, 0047, 0217, 0159, 0163, 0164, 0165, 0458
CLIO III	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0152, 0283
CLIO III	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0267, 0265, 0266, 0021, 0022, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0030, 0264, 0035, 0034, 0037, 0038, 0039, 0036, 0045, 0046, 0047, 0048, 0355, 0178
CLIO III	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
CLIO III	COMMUNICATIONS UNIT	●	●	●	●	●	○	●	
CLIO III	INJECTION	●	●	●	●	●	○	●	0004, 0016, 0006, 0007, 0048, 0005, 0003, 0076, 0018, 0019, 0284, 0536, 0009, 0010, 0011, 0012, 0481, 0675, 0556, 0823, 0363
CLIO III	INSTRUMENT PANEL	●	●	●	●	●	●	●	0051, 0393, 0053, 0056, 0392, 0058, 0059, 0060, 0061, 0321, 0062, 0225, 0394, 0395, 0396, 0315, 0226, 0048, 0229, 0063, 0230, 0064, 0231, 0322, 0465, 0260
CLIO III	LIGHTING	●	●	●	●	●	●	●	
CLIO III	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
CLIO III	MULTIMEDIA INTERFACE	●	●	●	●	●	○	●	
CLIO III	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
CLIO III	RADIO	●	●	●	●	●	○	●	
CLIO III	TYRES	●	●	●	●	●	●	●	0145, 0286, 0052, 0048, 0143, 0077
CLIO III	UCH	●	●	●	●	●	●	●	0053, 0211, 0389, 0390, 0404, 0102, 0097, 0209, 0089, 0100, 0208, 0210, 0107, 0418, 0457
CLIO III	UPC	●	●	●	●	●	●	●	
CLIO III	VARIABLE P. A. S.	●	●	●	●	●	※	●	0067
CLIO V6	AIR CONDITIONING	●	●	●	●	●	○	●	1178, 1179, 1180, 1181, 1182, 1183, 1185, 1184, 1186, 1187, 1189, 1188, 1192, 1193
CLIO V6	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0353, 0354, 0355, 0047
CLIO V6	CONNECTION UNIT	●	●	●	●	○	○	●	
CLIO V6	IMMOBILISER								
CLIO V6	INJECTION	●	●	●	●	●	○	●	0003
CLIO V6 PH 2	AIR CONDITIONING	●	●	●	●	○	○	●	
CLIO V6 PH 2	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0036, 0025, 0026, 0023, 0024, 0564, 0565, 1147, 1148, 0029, 0030, 0027, 0028, 1149, 0037, 0038, 0045, 0046, 0014
CLIO V6 PH 2	CONNECTION UNIT								
CLIO V6 PH 2	IMMOBILISER								
CLIO V6 PH 2	INJECTION	●	●	●	●	●	○	●	0003
CLIOIIP2/3/4	A. B. S.	●	●	●	●	※	※	●	0047, 0160, 0159, 0348, 1164, 1165, 1166, 0162, 0048
CLIOIIP2/3/4	AIR CONDITIONING	●	●	●	●	○	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
CLIOIIP2/3/4	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0036, 0025, 0026, 0023, 0024, 0564, 0565, 1147, 1148, 0029, 0030, 0027, 0028, 1149, 0037, 0038, 0045, 0046, 0014
CLIOIIP2/3/4	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0360, 0174, 0173, 0359, 0171
CLIOIIP2/3/4	CONNECTION UNIT								
CLIOIIP2/3/4	DISCHARGE LAMP	●	●	●	●	○	○	●	
CLIOIIP2/3/4	GAS INJ.	●	●	●	●	●	※	●	0048
CLIOIIP2/3/4	IMMOBILISER	●	●	●	●	※	○	●	
CLIOIIP2/3/4	INJECTION	●	●	●	●	●	○	●	0003, 0301, 0300, 0048, 0005, 0668, 0537, 0053, 0381, 0669, 0371, 1082, 0008, 0671, 0289, 0297, 0298, 0299
CLIOIIP2/3/4	LIGHTING	●	●	●	●	○	○	●	
CLIOIIP2/3/4	VARIABLE P. A. S.	●	●	●	●	○	○	●	
DUSTER	4 WHEELS DRIVE	●	●	●	●	●	○	●	
DUSTER	A. B. S.	●	●	●	●	●	○	●	0639, 0162, 0161, 0160, 0048, 0047, 0159
DUSTER	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0178, 0656, 0315, 0897, 0567, 0179, 0562, 0036, 0180, 0652, 0653, 0563, 0566, 0039, 0029, 0030, 0896, 0048, 0046, 0045
DUSTER	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
DUSTER	INJECTION	●	●	●	●	●	※	●	0005, 0076, 0016, 0006, 0536, 0675, 0556, 0823, 0363
DUSTER	RADIO	●	●	●	●	●	○	●	
DUSTER	TRACKER	●	●	●	●	●	○	●	
DUSTER	UCH	●	●	●	●	●	○	●	
DUSTER	VARIABLE P. A. S.	●	●	●	●	●	○	●	
ESPACE	A. B. S.	●	●	●	●	●	○	●	0047, 0160
ESPACE	AIR CONDITIONING	●	●	●	●	●	●	●	1195, 1196, 1197, 1198, 1199, 1200
ESPACE	AIRBAG / PRETENSIONERS	●	●	●	●	●	○	●	0266, 1143, 1144, 1145, 0047
ESPACE	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	1044, 0174, 1045, 1046, 1047, 0360, 0173, 0359
ESPACE	CONNECTION UNIT	●	●	●	●	※	●	●	
ESPACE	DISCHARGE LAMP	●	●	●	●	○	○	●	
ESPACE	HEATER	●	●	●	●	●	○	●	
ESPACE	IMMOBILISER	●	●	●	●	○	※	●	1050, 1051, 1052, 1053, 1054, 1055, 0332, 0331

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
ESPACE	INJECTION	●	●	●	●	●	※	●	0244, 0245, 1067, 1068, 0003, 1046, 1047, 1069, 1070, 0371, 0381, 0370, 0301, 0300, 1077, 1079, 1080, 1046, 1047, 0548, 1081, 0668, 0676, 1088, 1089, 1078, 1090, 1091, 0048
ESPACE	INSTRUMENT PANEL	●	○	○	●	○	●	●	0218, 0219, 0220, 0221, 0222, 0223, 0047, 0236, 0237, 0238, 0239, 0240, 0241, 0242, 0243, 0244, 0245, 0246, 0247, 0273, 0274, 0275, 0276, 0277, 0278, 0279, 0280, 0281, 0282
ESPACE	LIGHTING	●	●	●	●	○	○	●	
ESPACE IV	A. B. S.	●	●	●	●	●	●	●	0161, 0159, 0345, 0053, 0160, 0047, 0048, 0346, 0347, 0348, 0434, 0435, 0436, 0163, 0164, 0437, 0438
ESPACE IV	AIR CONDITIONING	●	●	●	●	●	●	●	0083, 0326, 0071, 0327, 0211, 0455, 0454, 0152, 0283, 0568
ESPACE IV	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0357, 0045, 0046, 0047, 0048, 0178
ESPACE IV	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
ESPACE IV	DISCHARGE LAMP	●	●	●	●	●	●	●	
ESPACE IV	HANDS-FREE KIT	●	●	●	●	●	●	●	
ESPACE IV	HEATER	●	●	●	●	●	○	●	
ESPACE IV	INJECTION	●	●	●	●	●	※	●	0003, 0301, 0300, 0048, 0004, 0016, 0311, 0364, 0383, 0007, 0006, 0005, 0433, 0018, 0019, 0371, 0381
ESPACE IV	INSTRUMENT PANEL	●	●	●	●	●	●	●	0052, 0224, 0054, 0059, 0056, 0316, 0342, 0057, 0193, 0060, 0058, 0317, 0061, 0343, 0055, 0336, 0337, 0338, 0339, 0344, 0048, 0340, 0053, 0227, 0225, 0226, 0442, 0443, 0459, 0460, 0318, 0465
ESPACE IV	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
ESPACE IV	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
ESPACE IV	UCH	●	●	●	●	●	●	●	0397, 0408, 0409, 0413, 0412, 0414, 0286, 0145, 0052, 0399, 0053, 0211, 0098, 0061, 0325, 0093, 0387, 0405, 0225, 0100, 0105, 0419, 0088, 0403, 0402, 0089, 0388, 0400, 0103, 0107, 0406, 0398, 0208, 0401, 0407, 0048, 0143
ESPACEIV PH2	A. B. S.	●	●	●	●	●	●	●	0434, 0435, 0436, 0161, 0053, 0048, 0160, 0159, 0047, 0163, 0164, 0437, 0438
ESPACEIV PH2	AIR CONDITIONING	●	●	●	●	●	●	●	0083, 0326, 0071, 0327, 0211, 0455, 0454, 0152, 0283, 0568
ESPACEIV PH2	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0178, 0045, 0046, 0047, 0048
ESPACEIV PH2	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
ESPACEIV PH2	COMMUNICATIONS UNIT	●	●	●	●	●	※	●	
ESPACEIV PH2	HEATER	●	●	●	●	●	○	●	
ESPACEIV PH2	INJECTION	●	●	●	●	●	※	●	0004, 0048, 0007, 0006, 0005, 0433, 0018, 0019, 0371, 0381, 0016, 0300, 0301, 0003, 0383, 0364, 0365, 0311, 0008, 0288, 0366, 0536, 0556
ESPACEIV PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0224, 0053, 0054, 0227, 0057, 0058, 0059, 0061, 0225, 0316, 0060, 0226, 0459, 0460, 0442, 0318, 0443, 0048, 0465
ESPACEIV PH2	LIGHTING	●	●	●	●	●	●	●	
ESPACEIV PH2	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
ESPACEIV PH2	MULTIMEDIA INTERFACE	●	●	●	●	●	※	●	
ESPACEIV PH2	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
ESPACEIV PH2	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
ESPACEIV PH2	PARKING PROX CAN	●	●	●	●	●	●	●	
ESPACEIV PH2	RADIO	●	●	●	●	●	※	●	
ESPACEIV PH2	UCH	●	●	●	●	●	●	●	0397, 0408, 0409, 0413, 0286, 0145, 0052, 0399, 0053, 0211, 0098, 0325, 0093, 0387, 0468, 0405, 0225, 0100, 0088, 0403, 0402, 0089, 0388, 0400, 0103, 0107, 0406, 0398, 0404, 0208, 0401, 0467, 0407, 0143, 0048
KANGOO	A. B. S.	●	●	●	●	●	○	●	0047, 0160, 0066
KANGOO	AIR CONDITIONING	●	●	●	●	●	○	●	1176, 1177, 1178, 1179, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1191, 1192, 1193
KANGOO	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0045, 0046, 1140, 1141, 1139, 1142, 0352, 1146, 0353, 0354, 0355, 0356, 0357, 0049, 0047, 0048
KANGOO	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	0174, 1045, 1046, 1047, 0360, 0173, 0359, 0171
KANGOO	CONNECTION UNIT	●	●	●	●	○	○	●	
KANGOO	GAS INJ.	●	●	●	●	●	※	●	0048
KANGOO	HEATER	●	●	●	●	●	○	●	
KANGOO	IMMOBILISER	●	●	●	●	●	○	●	1050, 1060, 1052, 1053

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
KANGOO	INJECTION	●	●	●	●	※	●	●	0244, 0245, 1067, 1068, 0301, 0300, 0003, 1172, 1173, 1209, 0048, 0537, 1069, 1070, 1047, 1071, 1072, 1046, 0371, 0381, 0370, 0669, 0005, 0668, 0053, 1082, 0008, 0671, 0289, 0297, 0298, 0299, 0676, 1047, 1046, 1088, 1089, 1078, 1077, 1090, 1091
KANGOO	INVERTER	●	●	●	●	○	○	●	
KANGOO	SUPERVISOR	●	●	●	●	●	○	●	
KANGOO II	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0159, 0160, 0048, 0047, 0163, 0164, 0165
KANGOO II	ADAPTATION UNIT	●	●	●	●	●	○	●	
KANGOO II	AIR CONDITIONING	●	●	●	●	●	●	●	0152, 0211, 0393, 0283
KANGOO II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0563, 0562, 0039, 0581, 0582, 0579, 0580, 0585, 0586, 0577, 0578, 0583, 0584, 0036, 0178, 0045, 0046, 0048
KANGOO II	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
KANGOO II	COMMUNICATIONS UNIT	●	●	●	●	●	○	●	
KANGOO II	INJECTION	●	●	●	●	●	○	●	0004, 0501, 0007, 0006, 0016, 0005, 0076, 0003, 0284, 0535, 0536, 0481, 0556, 0009, 0010, 0011, 0012, 0675, 0823, 0363
KANGOO II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0051, 0054, 0227, 0570, 0057, 0059, 0463, 0060, 0061, 0225, 0571, 0572, 0396, 0573, 0465, 0053, 0048, 0047, 0229, 0063, 0230, 0064, 0231, 0574, 0575, 0576, 0260
KANGOO II	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
KANGOO II	MULTIMEDIA INTERFACE	●	●	●	●	●	○	●	
KANGOO II	PARKING ASSISTANCE	●	●	●	●	●	●	●	
KANGOO II	RADIO	●	●	●	●	●	○	●	
KANGOO II	UCH	●	●	●	●	●	●	●	0587
KANGOO II	UPC	●	●	●	●	●	●	●	
KANGOO II	VARIABLE P. A. S.	●	●	●	●	●	○	●	0067
KANGOO MUX	A. B. S.	●	●	●	●	※	※	●	0160, 0047, 0066, 0162, 0159, 0048
KANGOO MUX	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0352, 1146, 0353, 0354, 0355, 0356, 0357, 0049, 0047, 0045, 0046, 0048
KANGOO MUX	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	0360, 0174, 0173, 0359, 0171
KANGOO MUX	CONNECTION UNIT	●	●	●	●	●	●	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
KANGOO MUX	GAS INJ.	●	●	●	●	●	※	●	0048
KANGOO MUX	IMMOBILISER	●	●	●	●	●	○	●	
KANGOO MUX	INJECTION	●	●	●	●	●	○	●	0003, 0301, 0300, 0048, 0005, 0668, 0537, 0053, 0381, 0669, 0371, 1082, 0008, 0671, 0289, 0297, 0298, 0299, 0676, 1047, 1046, 1088, 1089, 1078, 1077, 1090, 1091
KANGOO Z. E.	A. B. S.	●	●	●	○	○	○	●	
KANGOO Z. E.	ADAPTATION UNIT	●	●	●	●	○	○	●	
KANGOO Z. E.	AIR CONDITIONING	●	○	○	○	○	○	●	
KANGOO Z. E.	AIRBAG / PRETENSIONERS	●	●	●	○	○	○	●	
KANGOO Z. E.	BCB	●	○	○	○	○	○	●	
KANGOO Z. E.	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
KANGOO Z. E.	EVC	●	●	●	●	○	○	●	
KANGOO Z. E.	HEATER	●	○	○	○	○	○	●	
KANGOO Z. E.	INSTRUMENT PANEL	●	○	○	○	○	○	●	
KANGOO Z. E.	LBC	●	○	○	○	○	○	●	
KANGOO Z. E.	LBC2	●	○	○	○	○	○	●	
KANGOO Z. E.	MULTIMED. CONNECTION	●	●	●	●	○	○	●	
KANGOO Z. E.	MULTIMEDIA INTERFACE	●	●	●	○	○	○	●	
KANGOO Z. E.	PARKING ASSISTANCE	●	●	●	●	○	○	●	
KANGOO Z. E.	PEB	●	○	○	○	○	○	●	
KANGOO Z. E.	RADIO	●	●	●	●	○	○	●	
KANGOO Z. E.	TELEMATIC CTRL UNIT	●	●	●	●	○	○	●	
KANGOO Z. E.	UCH	●	○	○	○	○	○	●	
KANGOO Z. E.	UPC	●	※	※	※	○	○	●	
KANGOO Z. E.	VARIABLE P. A. S.	●	○	○	○	○	○	●	
KOLEOS/QM5	4 WHEELS DRIVE								
KOLEOS/QM5	A. B. S.								
KOLEOS/QM5	AIRBAG / PRETENSIONERS	●	●	●	○	○	○	●	
KOLEOS/QM5	AMPLIFIER	●	●	●	●	●	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
KOLEOS/QM5	AUTO FRONT LIGHTING	●	●	●	●	●	○	●	0603
KOLEOS/QM5	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0623
KOLEOS/QM5	COMMUNICATIONS UNIT	●	●	●	●	●	○	●	
KOLEOS/QM5	DISCHARGE LAMP	●	●	●	●	●	○	●	
KOLEOS/QM5	INJECTION	●	●	●	●	●	※	●	0618, 0619, 0620, 0301, 0621, 0004, 0288, 0366, 0311, 0364, 0536, 0556
KOLEOS/QM5	INSTRUMENT PANEL	●	●	●	●	●	●	●	0224, 0602, 0340
KOLEOS/QM5	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
KOLEOS/QM5	MULTIMEDIA INTERFACE	●	●	●	●	●	※	●	
KOLEOS/QM5	PARKING BRAKE	●	●	●	●	●	●	●	
KOLEOS/QM5	PARKING PROX CAN	●	●	●	●	●	●	●	
KOLEOS/QM5	RADIO	●	●	※	●	●	○	●	
KOLEOS/QM5	TYRES	●	●	●	●	●	○	●	0145
KOLEOS/QM5	UCH	●	●	●	●	●	●	●	0387, 0089, 0476, 0605, 0589, 0093, 0208
KOLEOS/QM5	UPC	●	●	●	●	●	○	●	
KOLEOS/QM5	VARIABLE P. A. S.	●	●	●	●	●	○	●	
LAGUNA	A. B. S.	●	●	●	●	※	○	●	0047, 0161, 0160, 1164
LAGUNA	AIR CONDITIONING	●	●	●	●	●	○	●	
LAGUNA	AIRBAG / PRETENSIONERS	●	●	●	●	●	○	●	0045, 0046, 1140, 1141, 1139, 1142, 0352
LAGUNA	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	1044
LAGUNA	IMMOBILISER	●	●	●	●	●	○	●	1050, 1051, 1052, 1053, 1054, 1055, 0332, 0331
LAGUNA	INJECTION	●	●	●	●	●	※	●	0244, 0245, 1067, 1068, 0371, 0381, 0370, 0301, 0300, 1046, 1047
LAGUNA	INSTRUMENT PANEL	●	●	●	●	●	●	●	0175, 0051, 0260, 0261
LAGUNA	VARIABLE P. A. S.	●	●	●	●	●	○	●	
LAGUNA	VOICE SYNTHESISER	●	●	●	●	●	●	●	
LAGUNA II	A. B. S.	●	●	●	●	●	●	●	0161, 0159, 0345, 0053, 0160, 0048, 0047, 0346, 0347, 0348
LAGUNA II	AIR CONDITIONING	●	●	●	●	●	●	●	0325, 0324, 0323, 0326, 0327, 0052
LAGUNA II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0178, 0045, 0046, 0047, 0048, 0357

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
LAGUNA II	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	0360, 0173, 0174
LAGUNA II	DISCHARGE LAMP	●	●	●	●	●	●	●	
LAGUNA II	GAS INJ.	●	●	●	●	●	●	●	
LAGUNA II	HEATER	●	●	●	●	●	○	●	
LAGUNA II	INJECTION	●	●	●	●	●	※	●	0003, 0301, 0300, 0048, 0371, 0381, 0016, 0018, 0019, 0005, 0433, 0004, 0366, 0311, 0364
LAGUNA II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0224, 0052, 0319, 0053, 0054, 0227, 0057, 0058, 0059, 0061, 0315, 0225, 0193, 0316, 0060, 0318, 0317, 0226, 0321, 0062, 0320, 0229, 0063, 0064, 0230, 0231, 0322, 0048, 0335, 0333, 0334, 0336, 0337, 0338, 0339, 0340
LAGUNA II	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
LAGUNA II	UCH	●	●	●	●	●	●	●	0397, 0286, 0145, 0053, 0419, 0420, 0061, 0093, 0317, 0091, 0100, 0325, 0422, 0088, 0403, 0400, 0089, 0103, 0388, 0423, 0424, 0105, 0425, 0211, 0426, 0427, 0428, 0401, 0098, 0225, 0407, 0330, 0048, 0143
LAGUNA III	4 WHEELS STEERING	●	●	●	○	○	○	●	
LAGUNA III	A. B. S.	●	●	●	●	○	●	●	0161, 0160, 0048, 0047, 0434, 0435, 0436
LAGUNA III	AIR CONDITIONING	●	●	●	●	○	○	●	
LAGUNA III	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0049, 0178, 0036, 0048, 0046, 0045
LAGUNA III	AMPLIFIER	●	●	●	○	○	○	●	
LAGUNA III	AUTOMATIC GEARBOX	●	●	●	●	○	○	●	
LAGUNA III	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
LAGUNA III	DRIVER'S DOOR	●	●	●	●	○	○	●	
LAGUNA III	INJECTION	●	●	●	●	○	○	●	0536, 0556
LAGUNA III	INSTRUMENT PANEL	●	●	●	●	○	●	●	0340
LAGUNA III	LEFT-HAND DOOR	●	○	○	●	○	○	●	
LAGUNA III	LIGHTING	●	●	●	●	○	○	●	
LAGUNA III	MULTIMED. CONNECTION	●	●	●	●	○	○	●	
LAGUNA III	MULTIMEDIA INTERFACE	●	●	●	●	○	○	●	
LAGUNA III	PARKING BRAKE	●	●	●	●	○	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
LAGUNA III	PARKING PROX CAN	●	●	●	●	○	○	●	
LAGUNA III	PASSENGER'S DOOR	●	●	●	●	○	○	●	
LAGUNA III	RADIO	●	※	※	※	○	○	●	
LAGUNA III	RIGHT-HAND DOOR	●	○	○	●	○	○	●	
LAGUNA III	SEAT MANAGEMENT	●	●	●	●	○	○	●	
LAGUNA III	UCH	●	●	●	●	○	○	●	
LAGUNA III	UPC	●	●	●	●	○	○	●	
LAGUNA III	VARIABLE P. A. S.	●	●	●	●	○	○	●	
LAGUNA PHASE 2	A. B. S.	●	●	●	●	※	○	●	0047, 0161, 0160, 1164
LAGUNA PHASE 2	AIR CONDITIONING	●	●	●	●	●	○	●	
LAGUNA PHASE 2	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0045, 0046, 1140, 1141, 1139, 1142, 0352, 1146, 0353, 0354
LAGUNA PHASE 2	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	1044, 0174, 1045, 1046, 1047
LAGUNA PHASE 2	GAS INJ.	●	●	●	●	●	●	●	
LAGUNA PHASE 2	IMMOBILISER	●	●	●	●	●	○	●	1050, 1051, 1052, 1053, 1054, 1055, 0332, 0331
LAGUNA PHASE 2	INJECTION	●	●	●	●	●	※	●	0244, 0245, 0003, 0371, 0381, 0370, 0301, 0300, 1046, 1047, 1077, 1078, 1046, 1047
LAGUNA PHASE 2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0175, 0051, 0260, 0261
LAGUNA PHASE 2	SEAT MANAGEMENT	●	●	●	●	●	○	●	
LAGUNA PHASE 2	VARIABLE P. A. S.	●	●	●	●	●	○	●	
LAGUNA PHASE 2	VOICE SYNTHESISER	●	●	●	●	●	●	●	
LAGUNAII PH2	A. B. S.	●	●	●	●	●	●	●	0161, 0053, 0048, 0160, 0159, 0047, 0434, 0435, 0436, 0163, 0164, 0437, 0438
LAGUNAII PH2	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0326, 0327, 0325, 0324, 0323
LAGUNAII PH2	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0178, 0045, 0046, 0047, 0048
LAGUNAII PH2	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
LAGUNAII PH2	COMMUNICATIONS UNIT	●	●	●	●	●	●	●	
LAGUNAII PH2	HANDS-FREE KIT	●	●	●	●	●	●	●	
LAGUNAII PH2	HEATER	●	●	●	●	●	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
LAGUNAII PH2	INJECTION	●	●	●	●	●	※	●	0004, 0016, 0048, 0007, 0006, 0005, 0433, 0018, 0019, 0371, 0381, 0300, 0301, 0366, 0311, 0364, 0288, 0536, 0365
LAGUNAII PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0224, 0052, 0319, 0053, 0054, 0227, 0057, 0058, 0059, 0061, 0315, 0225, 0193, 0316, 0060, 0318, 0317, 0226, 0321, 0062, 0320, 0229, 0063, 0064, 0230, 0231, 0322, 0048
LAGUNAII PH2	LIGHTING	●	●	●	●	●	●	●	
LAGUNAII PH2	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
LAGUNAII PH2	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
LAGUNAII PH2	RADIO								
LAGUNAII PH2	UCH	●	●	●	●	●	●	●	0397, 0408, 0413, 0409, 0286, 0145, 0052, 0399, 0053, 0211, 0098, 0325, 0093, 0387, 0405, 0225, 0100, 0105, 0088, 0403, 0402, 0089, 0388, 0400, 0103, 0107, 0406, 0398, 0404, 0208, 0401, 0048, 0407, 0143, 0419, 0420, 0061, 0317, 0091, 0422, 0423, 0424, 0425, 0426, 0427, 0428, 0330, 0468
LATITUDE/SM5	A. B. S.	●	●	●	○	○	○	●	
LATITUDE/SM5	AIR CONDITIONING								
LATITUDE/SM5	AIRBAG / PRETENSIONERS	●	●	●	○	○	○	●	
LATITUDE/SM5	AMPLIFIER	●	○	○	○	○	○	●	
LATITUDE/SM5	AUTOMATIC GEARBOX								
LATITUDE/SM5	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
LATITUDE/SM5	DRIVER'S DOOR	●	○	○	○	○	○	●	
LATITUDE/SM5	INJECTION	●	●	●	※	○	○	●	0536, 0556
LATITUDE/SM5	INSTRUMENT PANEL	●	○	○	○	○	○	●	
LATITUDE/SM5	LEFT-HAND DOOR	●	○	○	○	○	○	●	
LATITUDE/SM5	LIGHTING	●	○	○	○	○	○	●	
LATITUDE/SM5	MULTIMED. CONNECTION	●	●	●	○	○	○	●	
LATITUDE/SM5	MULTIMEDIA INTERFACE	●	●	●	○	○	○	●	
LATITUDE/SM5	PARKING BRAKE								
LATITUDE/SM5	PARKING PROX CAN	●	●	●	●	○	○	●	
LATITUDE/SM5	PASSENGER'S DOOR	●	●	●	○	○	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
LATITUDE/SM5	RADIO	●	○	○	○	○	○	●	
LATITUDE/SM5	RIGHT-HAND DOOR	●	○	○	○	○	○	●	
LATITUDE/SM5	SEAT MANAGEMENT	●	●	●	○	○	○	●	
LATITUDE/SM5	UCH	●	○	○	○	○	○	●	
LATITUDE/SM5	UPC	●	●	●	●	○	○	●	
LATITUDE/SM5	VARIABLE P. A. S.								
LOGAN	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0159, 0160, 0048, 0047
LOGAN	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0563, 0562, 0029, 0030, 0564, 0565, 0566, 0567, 0036, 0178, 0653, 0656, 0315, 0652, 0039, 0654, 0655, 0048, 0045, 0046, 0355
LOGAN	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
LOGAN	GAS INJ.	●	●	●	●	●	●	●	0048
LOGAN	INJECTION	●	●	●	●	●	○	●	0005, 0076, 0016, 0006, 0003, 0048, 0536, 0675, 0556, 0823, 0363
LOGAN	RADIO	●	●	●	●	●	○	●	
LOGAN	TRACKER	●	●	●	●	●	○	●	
LOGAN	UCH	●	●	●	●	●	○	●	0651
LOGAN	VARIABLE P. A. S.	●	●	●	●	●	※	●	
MAST. PRO. PH2	A. B. S.	●	●	●	●	●	○	●	0160
MAST. PRO. PH2	ADAPTATION UNIT	●	●	●	●	○	○	●	
MAST. PRO. PH2	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0355, 0356, 0049, 0047, 0045, 0046, 0048
MAST. PRO. PH2	CONNECTION UNIT								
MAST. PRO. PH2	DRIVING SCHOOL UNIT	●	●	●	●	○	○	●	
MAST. PRO. PH2	IMMOBILISER								
MAST. PRO. PH2	INJECTION	●	●	●	●	●	●	●	0668, 1093, 0311, 1094, 0048, 0301, 0300
MAST. RWD. PH3	A. B. S.	●	●	●	●	●	●	●	0161, 0498, 0048, 0159, 0160, 0047
MAST. RWD. PH3	ADAPTATION UNIT	●	●	●	●	●	○	●	
MAST. RWD. PH3	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0047, 0045, 0046, 0048
MAST. RWD. PH3	COMMUNICATIONS UNIT	●	●	●	●	●	●	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
MAST. RWD. PH3	INJECTION	●	●	●	●	●	●	●	0004, 0016, 0311, 0364
MAST. RWD. PH3	UCH	●	●	●	●	●	●	●	0093
MASTER	A. B. S.	●	●	●	●	○	○	●	0047
MASTER	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0352, 1146, 0353, 0354
MASTER	CONNECTION UNIT	●	●	●	●	○	○	●	
MASTER	IMMOBILISER	●	●	●	●	●	○	●	1050, 1060, 1052, 1053
MASTER	INJECTION	●	●	●	●	※	※	●	0371, 0381, 0370, 0301, 0300, 1073, 1074, 1075, 1076, 1077, 1079, 1080, 1046, 1047, 0548, 1081, 1078, 0668, 0676, 1088, 1089, 1090, 1091, 0048, 0598, 0559, 0560
MASTER	PILOTED SUSPENSION	●	●	●	●	●	○	●	
MASTER III	A. B. S.	●	●	●	●	○	○	●	0162, 0161, 0160, 0048, 0047
MASTER III	ADAPTATION UNIT	●	●	●	●	○	○	●	
MASTER III	AIR CONDITIONING	●	●	●	●	○	○	●	
MASTER III	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0049, 0355, 0178, 0036, 0048, 0046, 0045
MASTER III	AUTOMATIC GEARBOX	●	●	●	○	○	○	●	
MASTER III	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
MASTER III	INJECTION	●	●	●	●	○	○	●	0536, 0556
MASTER III	INSTRUMENT PANEL	●	●	●	●	○	○	●	0465, 0063, 0230, 0064, 0231
MASTER III	LIGHTING	●	●	●	●	○	○	●	
MASTER III	MULTIMED. CONNECTION	●	●	●	●	○	○	●	
MASTER III	MULTIMEDIA INTERFACE	●	●	●	●	○	○	●	
MASTER III	PARKING ASSISTANCE	●	●	●	●	○	○	●	
MASTER III	RADIO	●	●	●	●	○	○	●	
MASTER III	SMART KEYLESS	●	○	○	○	○	○	●	
MASTER III	TELEMATIC CTRL UNIT	●	●	●	●	○	○	●	
MASTER III	UCH	●	●	●	●	○	○	●	
MASTER III	UPC	●	●	●	●	○	○	●	
MASTER PH 2	A. B. S.	●	●	●	●	●	○	●	0047, 0160
MASTER PH 2	ADAPTATION UNIT	●	●	●	●	○	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ▲ This function is the new feature in this version.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
MEGANE II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0040, 0041, 0042, 0043, 0044, 0021, 0022, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0030, 0031, 0032, 0033, 0035, 0034, 0037, 0038, 0039, 0036, 0045, 0046, 0047, 0048, 0176, 0177, 0186, 0187, 0188, 0189, 0190, 0181, 0182, 0179, 0183, 0184, 0180, 0178, 0355, 0052
MEGANE II	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
MEGANE II	COMMUNICATIONS UNIT	●	●	●	●	●	●	●	
MEGANE II	DISCHARGE LAMP	●	●	●	●	●	●	●	
MEGANE II	GAS INJ.	●	●	●	●	●	●	●	0048
MEGANE II	INJECTION	●	●	●	●	●	※	●	0004, 0005, 0016, 0006, 0007, 0076, 0018, 0019, 0009, 0010, 0011, 0012, 0288, 0300, 0301, 0311, 0003, 0284, 0536, 0366, 0481, 0364, 0371, 0365
MEGANE II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0051, 0052, 0053, 0054, 0056, 0057, 0058, 0059, 0060, 0061, 0062, 0048, 0063, 0064, 0393, 0392, 0321, 0225, 0394, 0395, 0396, 0315, 0226, 0229, 0230, 0231, 0322, 0465
MEGANE II	LEFT COSLAD	●	●	●	●	●	●	●	
MEGANE II	LIGHTING	●	●	●	●	●	●	●	
MEGANE II	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
MEGANE II	RIGHT COSLAD	●	●	●	●	●	●	●	
MEGANE II	SUNROOF CONTROL UNIT	●	●	●	●	●	●	●	
MEGANE II	TRACKER	●	●	●	●	●	○	●	
MEGANE II	UCH	●	●	●	●	●	●	●	0095, 0105, 0097, 0100, 0209, 0089, 0053, 0211, 0207, 0391, 0389, 0386, 0457
MEGANE II	UPC	●	●	●	●	●	●	●	
MEGANE II	VARIABLE P. A. S.	●	●	●	●	●	●	●	0067
MEGANE/SCEN.	A. B. S.	●	●	●	●	●	○	●	0047, 0160, 0066, 0159, 0348, 1164, 1165
MEGANE/SCEN.	AIR CONDITIONING	●	●	●	●	●	※	●	1176, 1177, 1178, 1179, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1191, 1192, 1193, 0278, 1194
MEGANE/SCEN.	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0045, 0046, 1140, 1141, 1139, 1142, 0352, 1146, 0353, 0354, 0355, 0356, 0357, 0049, 0047
MEGANE/SCEN.	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	1044, 0174, 1045, 1046, 1047, 0360, 0173, 0359, 0171
MEGANE/SCEN.	GAS INJ.	●	●	●	●	●	○	●	0048

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ▲ This function is the new feature in this version.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
MEGANE/SCEN.	INJECTION	●	●	●	●	※	※	●	0244, 0245, 0003, 1047, 1167, 1168, 1069, 1070, 1077, 1078, 1079, 1080, 0301, 0300, 0367, 0048, 0537, 1071, 1072, 1046, 0053, 0371, 0381, 0370, 1046, 1047, 0669, 0668, 0676, 1088, 1089, 1090, 1091
MEGANE/SCEN.	SEAT MANAGEMENT	●	●	●	●	●	○	●	
MEGANE/SCEN.	SUNROOF CONTROL UNIT	●	●	●	●	●	○	●	
MEGANE/SCEN.	TYRES	●	●	●	●	○	●	●	0397, 0286, 0052, 0143, 0407, 0330
MEGANEIII/SCENICIII	A. B. S.	●	●	●	●	○	●	●	0161, 0160, 0048, 0047, 0434, 0435, 0436, 0543
MEGANEIII/SCENICIII	AIR CONDITIONING	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0049, 0178, 0048, 0046, 0045
MEGANEIII/SCENICIII	AUTOMATIC GEARBOX	●	●	●	○	○	○	●	
MEGANEIII/SCENICIII	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	DRIVER'S DOOR	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	FRONT CAMERA	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	INJECTION	●	●	●	●	○	○	●	0536, 0556
MEGANEIII/SCENICIII	INSTRUMENT PANEL	●	●	●	●	○	●	●	0340, 0230, 0515
MEGANEIII/SCENICIII	LIGHTING	●	●	●	○	○	○	●	
MEGANEIII/SCENICIII	MULTIMED. CONNECTION	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	MULTIMEDIA INTERFACE	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	PARKING BRAKE	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	PARKING PROX CAN	●	●	●	※	○	○	●	
MEGANEIII/SCENICIII	PASSENGER'S DOOR	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	RADIO	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	SEAT MANAGEMENT	●	●	●	○	○	○	●	
MEGANEIII/SCENICIII	SUNROOF CONTROL UNIT	●	※	※	※	○	○	●	
MEGANEIII/SCENICIII	TELEMATIC CTRL UNIT	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	UCH	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	UPC	●	●	●	●	○	○	●	
MEGANEIII/SCENICIII	VARIABLE P. A. S.	●	●	●	●	○	○	●	0067

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ▲ This function is the new feature in this version.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
MODUS	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0160, 0048, 0047, 0217, 0159, 0163, 0164, 0165, 0458
MODUS	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0152, 0283
MODUS	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0267, 0265, 0266, 0262, 0263, 0023, 0024, 0025, 0026, 0027, 0028, 0029, 0030, 0264, 0035, 0034, 0037, 0038, 0039, 0179, 0180, 0036, 0045, 0046, 0047, 0048, 0355, 0178
MODUS	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
MODUS	HANDS-FREE KIT	●	●	●	●	●	●	●	
MODUS	INJECTION	●	●	●	●	●	○	●	0004, 0016, 0006, 0007, 0048, 0005, 0076, 0018, 0019, 0009, 0010, 0011, 0012, 0003, 0284, 0536, 0481, 0675, 0556, 0823, 0363
MODUS	INSTRUMENT PANEL	●	●	●	●	●	●	●	0052, 0224, 0059, 0227, 0053, 0054, 0057, 0058, 0060, 0061, 0225, 0226, 0048, 0229, 0063, 0230, 0064, 0231, 0232, 0228, 0465
MODUS	LIGHTING	●	●	●	●	●	●	●	
MODUS	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
MODUS	TYRES	●	●	●	●	●	●	●	0145, 0286, 0052, 0048, 0143, 0077
MODUS	UCH	●	●	●	●	●	●	●	0102, 0208, 0100, 0211, 0089, 0212, 0210, 0209, 0107
MODUS	UPC	●	●	●	●	●	●	●	
MODUS	VARIABLE P. A. S.	●	●	●	●	●	●	●	0067
NEW SM3/FLUENCE/MEGANE	A. B. S.	●	●	●	●	○	※	●	0161, 0160, 0048, 0047, 0434, 0435, 0436, 0543
NEW SM3/FLUENCE/MEGANE	AIR CONDITIONING	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	AIRBAG / PRETENSIONERS	●	●	●	●	○	●	●	0049, 0178, 0048, 0046, 0045
NEW SM3/FLUENCE/MEGANE	AMPLIFIER	●	●	●	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	●	●	●	○	○	○	●	0173, 0174
NEW SM3/FLUENCE/MEGANE	BCB	●	○	○	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	COMMUNICATIONS UNIT	●	●	●	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	DRIVER'S DOOR	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	EVC	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	INJECTION	●	●	●	●	○	※	●	0536, 0556

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	●	●	●	●	○	※	●	0340, 0230, 0515
NEW SM3/FLUENCE/MEGANE	LBC	●	○	○	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	LBC2	●	○	○	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	LIGHTING	●	●	●	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	MULTIMED. CONNECTION	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	MULTIMEDIA INTERFACE	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	PARKING BRAKE	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	PARKING PROX CAN	●	●	●	※	○	○	●	
NEW SM3/FLUENCE/MEGANE	PEB	●	○	○	○	○	○	●	
NEW SM3/FLUENCE/MEGANE	RADIO	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	SUNROOF CONTROL UNIT	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	TELEMATIC CTRL UNIT	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	TRACKER	●	●	●	●	●	○	●	
NEW SM3/FLUENCE/MEGANE	UCH	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	UPC	●	●	●	●	○	○	●	
NEW SM3/FLUENCE/MEGANE	VARIABLE P. A. S.	●	●	●	●	○	○	●	0067
SANDERO	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0159, 0160, 0048, 0047
SANDERO	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0563, 0562, 0029, 0030, 0564, 0565, 0566, 0567, 0036, 0178, 0653, 0656, 0315, 0652, 0039, 0654, 0655, 0048, 0045, 0046, 0355
SANDERO	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
SANDERO	GAS INJ.	●	●	●	●	●	●	●	0048
SANDERO	INJECTION	●	●	●	●	●	○	●	0005, 0076, 0016, 0006, 0003, 0048, 0536, 0675, 0556, 0823, 0363
SANDERO	RADIO	●	●	●	●	●	○	●	
SANDERO	TRACKER	●	●	●	●	●	○	●	
SANDERO	UCH	●	●	●	●	●	○	●	0651
SANDERO	VARIABLE P. A. S.	●	●	●	●	●	※	●	
SCENIC II	A. B. S.	●	●	●	●	●	○	●	0161, 0162, 0160, 0048, 0047, 0159, 0163, 0164, 0165, 0217, 0458

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ▲ This function is the new feature in this version.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
SCENIC II	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0152
SCENIC II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0040, 0041, 0042, 0043, 0044, 0176, 0177, 0186, 0187, 0188, 0189, 0190, 0036, 0021, 0022, 0023, 0024, 0025, 0026, 0181, 0182, 0027, 0028, 0029, 0030, 0031, 0032, 0033, 0035, 0034, 0039, 0179, 0183, 0184, 0180, 0178, 0045, 0046, 0047, 0048, 0355, 0052
SCENIC II	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0173, 0174
SCENIC II	COMMUNICATIONS UNIT	●	●	●	●	●	●	●	
SCENIC II	DISCHARGE LAMP	●	●	●	●	●	●	●	
SCENIC II	GAS INJ.	●	●	●	●	●	●	●	0048
SCENIC II	INJECTION	●	●	●	●	●	※	●	0004, 0005, 0016, 0006, 0007, 0076, 0018, 0019, 0009, 0010, 0011, 0012, 0288, 0300, 0301, 0311, 0003, 0284, 0536, 0366, 0481, 0364, 0371, 0365
SCENIC II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0051, 0193, 0052, 0053, 0054, 0056, 0057, 0058, 0059, 0060, 0061, 0048, 0063, 0064, 0226, 0229, 0230, 0231, 0465
SCENIC II	MULTIMEDIA INTERFACE	●	●	●	●	●	※	●	
SCENIC II	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
SCENIC II	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
SCENIC II	PARKING PROX CAN	●	●	●	●	●	●	●	
SCENIC II	RADIO	●	●	●	●	●	●	●	
SCENIC II	UCH	●	●	●	●	●	●	●	0095, 0105, 0097, 0100, 0209, 0089, 0389, 0053, 0211, 0207, 0391, 0386, 0457
SCENIC II	UPC	●	●	●	●	●	●	●	
SCENIC II	VARIABLE P. A. S.	●	●	●	●	●	○	●	0067
SM7 - L47	A. B. S.	●	●	●	○	○	○	●	
SM7 - L47	AIR CONDITIONING								
SM7 - L47	AIRBAG / PRETENSIONERS	●	●	●	○	○	○	●	
SM7 - L47	AMPLIFIER	●	○	○	○	○	○	●	
SM7 - L47	AUTOMATIC GEARBOX	●	●	●	○	○	○	●	
SM7 - L47	COMMUNICATIONS UNIT	●	●	●	●	○	○	●	
SM7 - L47	DRIVER'S DOOR	●	○	○	○	○	○	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
SM7 - L47	INJECTION	●	●	●	○	○	○	●	
SM7 - L47	INSTRUMENT PANEL	●	○	○	○	○	○	●	
SM7 - L47	LEFT-HAND DOOR	●	○	○	○	○	○	●	
SM7 - L47	LIGHTING	●	○	○	○	○	○	●	
SM7 - L47	MULTIMED. CONNECTION	●	●	●	○	○	○	●	
SM7 - L47	MULTIMEDIA INTERFACE	●	●	●	○	○	○	●	
SM7 - L47	PARKING BRAKE								
SM7 - L47	PARKING PROX CAN	●	●	●	●	○	○	●	
SM7 - L47	PASSENGER' S DOOR	●	●	●	○	○	○	●	
SM7 - L47	RADIO	●	○	○	○	○	○	●	
SM7 - L47	RIGHT-HAND DOOR	●	○	○	○	○	○	●	
SM7 - L47	SEAT MANAGEMENT	●	●	●	○	○	○	●	
SM7 - L47	UCH	●	○	○	○	○	○	●	
SM7 - L47	UPC	●	○	○	○	○	○	●	
THALIA/SYMB. 2	A. B. S.	●	●	●	●	●	○	●	0162, 0161, 0160, 0048, 0047, 0159
THALIA/SYMB. 2	AIR CONDITIONING	●	●	●	●	●	○	●	
THALIA/SYMB. 2	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0046, 0045, 0178, 0863, 0656, 0315, 0565, 0567, 0562, 0036, 0652, 0653, 0563, 0564, 0566, 0039, 0029, 0030, 0048
THALIA/SYMB. 2	AUTOMATIC GEARBOX	●	●	●	●	●	※	●	0173, 0174
THALIA/SYMB. 2	INJECTION	●	●	●	●	●	○	●	0005, 0076, 0016, 0006, 0003, 0048, 0669, 0536
THALIA/SYMB. 2	TRACKER	●	●	●	●	●	○	●	
THALIA/SYMB. 2	UCH	●	●	●	●	●	○	●	
THALIA/SYMB. 2	VARIABLE P. A. S.	●	●	●	●	○	○	●	
THALIA/SYMBL	A. B. S.	●	●	●	●	※	※	●	0047, 0160, 0162, 0159, 0048
THALIA/SYMBL	AIR CONDITIONING	●	●	●	●	※	○	●	1176, 1177, 1178, 1179, 1180, 1181, 1182, 1183, 1184, 1185, 1186, 1187, 1188, 1189, 1190, 1191, 1192, 1193
THALIA/SYMBL	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0353, 0354, 0355, 0047, 0049, 0178, 0652, 0036, 0562, 0565, 0563, 0564, 0653, 0048, 0045, 0046
THALIA/SYMBL	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	0174, 1045, 1046, 1047, 0360, 0173, 0359, 0171

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
THALIA/SYMBL	CONNECTION UNIT	●	●	●	●	※	○	●	0066, 1137, 1138
THALIA/SYMBL	IMMOBILISER	●	●	●	●	※	○	●	1050, 1060, 1052, 1053
THALIA/SYMBL	INJECTION	●	●	●	●	●	○	●	0003, 0048, 0301, 0300, 0005, 0668, 0537, 0053, 0381, 0669, 0371, 1082, 0008, 0671, 0289, 0297, 0298, 0299
TRAFIC II	A. B. S.	●	●	●	●	※	※	●	0047, 0160, 0159, 0348
TRAFIC II	ADAPTATION UNIT	●	●	●	●	○	○	●	
TRAFIC II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0356, 0357, 0049, 0497, 0045, 0046, 0047, 0048, 0178, 0355
TRAFIC II	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
TRAFIC II	CONNECTION UNIT								
TRAFIC II	DRIVING SCHOOL UNIT	●	●	●	●	○	○	●	
TRAFIC II	HEATER	●	●	●	●	●	○	●	
TRAFIC II	IMMOBILISER								
TRAFIC II	INJECTION	●	●	●	●	●	●	●	0003, 0301, 0300, 0048, 1077, 1078, 1046, 1047, 0668, 0676, 1088, 1089, 1090, 1091, 0381, 0559, 0560, 1093, 0311
TRAFIC II	PARKING ASSISTANCE								
TRAFICII P2/3	A. B. S.	●	●	●	●	●	○	●	0498, 0047, 0160, 0348, 0159, 0162, 0161, 0048, 0458, 0217, 0893, 0165
TRAFICII P2/3	ADAPTATION UNIT	●	●	●	●	●	○	●	
TRAFICII P2/3	AIR CONDITIONING	●	●	●	●	●	○	●	
TRAFICII P2/3	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0497, 0178, 0045, 0046, 0047, 0048
TRAFICII P2/3	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
TRAFICII P2/3	COMMUNICATIONS UNIT	●	●	●	●	●	○	●	
TRAFICII P2/3	HEATER	●	●	●	●	●	○	●	
TRAFICII P2/3	INJECTION	●	●	●	●	●	○	●	0004, 0016, 0006, 0007, 0288, 0366, 0311, 0364, 0536, 0005, 0433, 0018, 0019, 0548, 0381, 0371, 0300, 0301, 0556, 0554, 0675, 0823, 0363
TRAFICII P2/3	INSTRUMENT PANEL	●	●	●	●	●	●	●	0465, 0443
TRAFICII P2/3	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
TRAFICII P2/3	MULTIMEDIA INTERFACE	●	●	●	●	●	○	●	
TRAFICII P2/3	PARKING ASSISTANCE	●	●	●	●	●	●	●	

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
TRAFICII P2/3	RADIO	●	●	●	●	●	○	●	
TRAFICII P2/3	UCH	●	●	●	●	●	●	●	0093, 0061, 0423, 0089
TWINGO II	A. B. S.	●	●	●	●	●	※	●	0161, 0053, 0159, 0160, 0048, 0047, 0639, 0162, 0348, 0163, 0164
TWINGO II	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0152, 0283
TWINGO II	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0563, 0562, 0029, 0030, 0027, 0028, 0564, 0565, 0566, 0567, 0039, 0036, 0178, 0045, 0046, 0048
TWINGO II	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
TWINGO II	INJECTION	●	●	●	●	●	●	●	0004, 0536, 0006, 0007, 0016, 0005, 0076, 0018, 0019, 0009, 0010, 0011, 0012, 0675, 0556, 0823, 0363
TWINGO II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0053, 0054, 0057, 0059, 0060, 0061, 0315, 0395, 0463, 0464, 0465, 0048, 0466, 0443
TWINGO II	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
TWINGO II	MULTIMEDIA INTERFACE	●	●	●	●	●	○	●	
TWINGO II	PARKING ASSISTANCE	●	●	●	●	●	●	●	
TWINGO II	RADIO	●	●	●	●	●	○	●	
TWINGO II	REV COUNTER/SYMBOL	●	※	○	●	●	※	●	
TWINGO II	UCH	●	●	●	●	●	●	●	0085, 0083, 0207, 0418, 0389, 0390, 0105, 0097, 0093, 0471, 0472, 0387, 0473, 0100, 0423, 0089, 0474, 0475, 0476
TWINGO II	VARIABLE P. A. S.	●	●	●	●	●	※	●	
TWINGO PHASE 2	A. B. S.	●	●	●	●	※	※	●	0047, 0162, 0159, 0160, 0048
TWINGO PHASE 2	AIRBAG / PRETENSIONERS	●	●	●	●	●	※	●	0045, 0046, 1140, 1141, 1139, 1142, 0352, 1146, 0353, 0354, 0355, 0356, 0357, 0049, 0047
TWINGO PHASE 2	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
TWINGO PHASE 2	CONNECTION UNIT	●	●	●	●	○	※	●	
TWINGO PHASE 2	GAS INJ.	●	●	●	●	●	※	●	0048
TWINGO PHASE 2	IMMOBILISER	●	●	●	●	※	○	●	1050, 1060, 1052, 1053
TWINGO PHASE 2	INJECTION	●	●	●	●	※	●	●	0244, 0245, 1069, 1070, 0301, 0300, 0003, 1172, 1173, 0048
TWINGO PHASE 2	VARIABLE P. A. S.								
VEL SATIS	A. B. S.	●	●	●	●	●	●	●	0161, 0159, 0345, 0053, 0362, 0160, 0048, 0047, 0346, 0347, 0348

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
- This function is not supported.
- ▲ This function is the new feature in this version.
- ※ This function may be supported, which depends on the actual condition of the vehicle.

As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
VEL SATIS	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0325, 0324, 0323, 0326, 0327
VEL SATIS	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0178, 0045, 0046, 0047, 0048, 0357
VEL SATIS	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
VEL SATIS	DISCHARGE LAMP	●	●	●	●	●	●	●	
VEL SATIS	DISTANCE REGULATOR	●	●	●	●	●	●	●	0374
VEL SATIS	HEATER	●	●	●	●	●	○	●	
VEL SATIS	INJECTION	●	●	●	●	●	※	●	0004, 0018, 0019, 0366, 0311, 0364, 0016, 0003, 0301, 0300, 0048, 0371, 0381, 0383, 0007, 0006, 0005, 0433
VEL SATIS	INSTRUMENT PANEL	●	●	●	●	●	●	●	0052, 0224, 0335, 0316, 0333, 0334, 0336, 0337, 0338, 0339, 0048, 0340, 0315, 0341, 0319, 0053, 0054, 0227, 0057, 0058, 0059, 0061, 0225, 0193, 0060, 0318, 0439, 0440, 0441, 0444, 0317, 0226, 0321, 0062, 0229, 0063, 0064, 0230, 0231, 0322
VEL SATIS	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
VEL SATIS	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
VEL SATIS	TYRES	●	●	●	●	●	●	●	0286, 0145, 0052, 0077, 0330, 0143
VEL SATIS	UCH	●	●	●	●	●	●	●	0053, 0419, 0420, 0421, 0093, 0317, 0091, 0225, 0105, 0100, 0325, 0422, 0088, 0403, 0400, 0089, 0103, 0388, 0423, 0424, 0425, 0211, 0426, 0427, 0428, 0401, 0098, 0061
VELSATIS PH2	A. B. S.	●	●	●	●	●	●	●	0161, 0159, 0345, 0053, 0362, 0160, 0048, 0047, 0346, 0347, 0348, 0434, 0435, 0436, 0163, 0164, 0437, 0438
VELSATIS PH2	AIR CONDITIONING	●	●	●	●	●	●	●	0052, 0326, 0327, 0325, 0324, 0323
VELSATIS PH2	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0355, 0356, 0178, 0045, 0046, 0047, 0048
VELSATIS PH2	AUTOMATIC GEARBOX	●	●	●	●	●	○	●	
VELSATIS PH2	COMMUNICATIONS UNIT	●	●	●	●	●	●	●	
VELSATIS PH2	HANDS-FREE KIT	●	●	●	●	●	●	●	
VELSATIS PH2	HEATER	●	●	●	●	●	○	●	
VELSATIS PH2	INJECTION	●	●	●	●	●	※	●	0004, 0018, 0019, 0366, 0311, 0364, 0016, 0003, 0301, 0300, 0048, 0383, 0007, 0006, 0005, 0433, 0371, 0381, 0365, 0008, 0288, 0536

MaxiDas_Renault_V6.00 Function List

NOTES:

- This function is supported.
 - This function is not supported.
 - ▲ This function is the new feature in this version.
 - ※ This function may be supported, which depends on the actual condition of the vehicle.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info.	Read Codes	Erase Codes	Live Data	Function Test	Read Config	Actuator	Special_Function
VELSATIS PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0224, 0052, 0319, 0053, 0054, 0227, 0057, 0058, 0059, 0061, 0315, 0225, 0193, 0316, 0060, 0318, 0439, 0440, 0441, 0444, 0317, 0226, 0321, 0062, 0229, 0063, 0064, 0230, 0231, 0048, 0322
VELSATIS PH2	LIGHTING	●	●	●	●	●	●	●	
VELSATIS PH2	PARKING ASSISTANCE	●	●	●	●	●	●	●	0068, 0069
VELSATIS PH2	PARKING BRAKE	●	●	●	●	●	●	●	0201, 0200
VELSATIS PH2	PARKING PROX CAN	●	●	●	●	●	●	●	
VELSATIS PH2	RADIO								
VELSATIS PH2	UCH	●	●	●	●	●	●	●	0397, 0408, 0409, 0413, 0286, 0145, 0052, 0053, 0211, 0098, 0325, 0317, 0093, 0387, 0405, 0225, 0100, 0105, 0088, 0403, 0402, 0089, 0388, 0400, 0103, 0107, 0406, 0398, 0404, 0208, 0401, 0407, 0048, 0143, 0468, 0467
WIND	A. B. S.	●	●	●	●	●	※	●	0161, 0053, 0160, 0048, 0047, 0159, 0639, 0162, 0348, 0164, 0163
WIND	AIR CONDITIONING	●	●	●	●	●	○	●	
WIND	AIRBAG / PRETENSIONERS	●	●	●	●	●	●	●	0049, 0178, 0897, 0567, 0562, 0036, 0563, 0566, 0039, 0029, 0030, 0896, 0048, 0046, 0045
WIND	INJECTION	●	●	●	●	●	●	●	0004, 0536, 0006, 0007, 0016
WIND	INSTRUMENT PANEL	●	●	●	●	●	●	●	
WIND	MULTIMED. CONNECTION	●	●	●	●	●	○	●	
WIND	MULTIMEDIA INTERFACE	●	●	●	●	●	○	●	
WIND	RADIO	●	●	●	●	●	○	●	
WIND	SUNROOF CONTROL UNIT	●	●	●	●	●	○	●	
WIND	UCH	●	●	●	●	●	○	●	
WIND	VARIABLE P. A. S.	●	●	●	●	●	○	●	

Special_Function

index	Specil Function Name	index	Specil Function Name
0001	OXYGEN SENSOR TEST	0606	HEAD LAMP BATTERY SAVER FUNCTION
0002	FAULT MEMORY	0607	DONGLE
0003	PROGRAMMING REINITIALIZATION	0608	BCM INITIAL SETTING
0004	PROGRAMMED VALUES	0609	SYSTEM CONFIGURATION
0005	EGR ADAPTIVES	0610	RADIO PROGRAMMING KEY
0006	LOCK INJECTOR CONTROL	0611	CD CHANGER
0007	UNLOCK INJECTOR CONTROL	0612	SPECIAL SCREEN
0008	PREVENTION OF ELECTRICAL CONSUMERS	0613	SCREEN CONTRAST
0009	CYLINDER 1 INJECTOR CODE	0614	EMERGENCY CALL NUMBER
0010	CYLINDER 2 INJECTOR CODE	0615	ACOUSTIC CRITERIA
0011	CYLINDER 3 INJECTOR CODE	0616	ACOUSTIC CALIBRATION
0012	CYLINDER 4 INJECTOR CODE	0617	SENSOR TYPE
0013	PARAMETRAGE PRIVE 3	0618	ADAPTIVE VALUE – A/F RATIO
0014	PARAMETRAGE PRIVE 1	0619	IDLE AIR VOLUME LEARNING – SERVICE MODE
0015	PARAMETRAGE PRIVE 2	0620	IDLE AIR VOLUME LEARNING – FACTORY MODE
0016	WRITE V. I. N.	0621	IGNITION TIMING ADJUSTMENT
0017	ENTER INJECTOR CODES	0622	EEPROM MEMORY WRITE PROCEDURE
0018	SAVE COMPUTER DATA	0623	RESET OIL CHANGE COUNTER
0019	WRITE SAVED DATA	0624	PARAMETRAGE PRIVE 24
0020	COMMANDE PRIVEE 1	0625	PARAMETRAGE PRIVE 25
0021	DRIVER’S LAP STRAP/SEAT AIRBAG	0626	PARAMETRAGE PRIVE 26
0022	PASSENGER’S LAP STRAP/SEAT AIRBAG	0627	PARAMETRAGE PRIVE 27
0023	PASSENGER FRONT AIR BAG CIRCUIT 1	0628	PARAMETRAGE PRIVE 28
0024	PASSENGER FRONT AIR BAG CIRCUIT 2	0629	PARAMETRAGE PRIVE 29
0025	DRIVER FRONT AIR BAG CIRCUIT 1	0630	PARAMETRAGE PRIVE 30
0026	DRIVER FRONT AIR BAG CIRCUIT 2	0631	PARAMETRAGE PRIVE 31
0027	CURTAIN SIDE AIR BAG, DRIVER’S SIDE	0632	PARAMETRAGE PRIVE 32
0028	CURTAIN SIDE AIR BAG, PASSENGER SIDE	0633	PARAMETRAGE PRIVE 33
0029	FRONT THORAX SIDE AIR BAG, DRIVER SIDE	0634	PARAMETRAGE PRIVE 34
0030	FRONT THORAX SIDE AIR BAG, PASSENGER SIDE	0635	PARAMETRAGE PRIVE 35
0031	REAR THORAX SIDE AIR BAG, DRIVER SIDE	0636	PARAMETRAGE PRIVE 36
0032	REAR THORAX SIDE AIR BAG, PASSENGER SIDE	0637	PARAMETRAGE PRIVE 37
0033	FRONT BUCKLE PRETENSIONERS	0638	PARAMETRAGE PRIVE 38
0034	DRIVER’S SEAT POSITION SENSOR	0639	SENSOR OFFSETS
0035	REAR INERTIA REELS	0640	SHOE LINING ENERGY COUNTER
0036	PASSENGER AIR BAG LOCKING MODE	0641	COMMISSION AUTOMATIC APPLICATION
0037	DRIVER’S LATERAL SENSOR	0642	BRAKE LINING FRICTION LEARNING
0038	PASSENGER’S LATERAL SENSOR	0643	REAR BRAKE UNIT REPOSITIONING
0039	DRIVER’S SEAT BUCKLE SENSOR	0644	REAR BRAKE UNIT INITIALIZATION
0040	B/C WITH FR/RR THORAX + HEAD AIRBAGS	0645	TYPE N2
0041	B/C WITH FRONT THORAX + HEAD AIRBAGS	0646	TYPE N2 (SPECIFIC TO RUSSIA)
0042	B/C WITHOUT SIDE AIRBAGS	0647	TYPE N3
0043	G/S WITH HEAD AIRBAGS	0648	TYPE N4
0044	G/S WITHOUT HEAD AIRBAG	0649	TYPE N5
0045	LOCK COMPUTER	0650	VEHICLE EQUIPMENT LEVEL
0046	UNLOCK COMPUTER	0651	FLASHING BUZZER
0047	WRITE DATE OF LAST AFTER SALES OPERATION	0652	PASS AIRBAG DEACTIVATION WARNING LIGHT
0048	WRITE VIN	0653	IMPACT INFORMATION CONNECTION
0049	READING IMPACT CONTEXTS	0654	FRONT LEFT-HAND INERTIA WHEEL

Special_Function

index	Specil Function Name	index	Specil Function Name
0050	COMMANDE PRIVEE 2	0655	FRONT RIGHT-HAND INERTIA WHEEL
0051	LANGUAGE CONFIGURATION	0656	SEAT BELT LIGHT
0052	VEHICLE TYPE	0657	REAR SCREEN DEMISTER
0053	GEARBOX TYPE	0658	EXHAUST INJECTOR CIRCUIT
0054	FUEL TYPE	0659	SCANDINAVIAN RUNNINGS LIGHTS
0055	HANDS FREE	0660	UCH PROGRAMMING ROUTINE
0056	CONSUMPTION MEASUREMENT UNITS	0661	FAULT FINDING: TYRE PRESSURE MONITOR WARNINGS
0057	TRAJECTORY CONTROL	0662	INJECTOR CYLINDER 5
0058	TYRE PRESSURE MONITORING	0663	INJECTOR CYLINDER 6
0059	DISTANCE UNITS	0664	TYPE N2 MERCOSUR
0060	CRUISE CTRL/SPD LIMITER	0665	TYPE N4 MERCOSUR
0061	OVERSPEED FUNCTION - ARABIA	0666	TYPE N4 (SPECIFIC TO VENEZUELA COLOMBIA)
0062	RESERVE CAPACITY	0667	TYPE N2 (SPECIFIC TO VENEZUELA COLOMBIA)
0063	OIL CHANGE INTERVAL IN KM	0668	ENGINE PARAMETER ADAPTIVES
0064	OIL CHANGE INTERVAL IN MONTHS	0669	POWER STEERING ELECTRIC PUMP UNIT
0065	COMPUTER CALIBRATION	0670	NUMBER OF HEATING ELEMENTS
0066	WRITE DATE OF AFTER SALES OPERATION	0671	INJECTION PROHIBITION
0067	STEERING WHEEL ANGLE SENSOR PROGRAMMING	0672	AMPLIFIER RESET
0068	BUZZER VOLUME	0673	SUBWOOFER
0069	TONE ADJUSTMENT	0674	AIR DAMPER VALVE PROGRAMMING
0070	VEHICLE IDENTIFICATION	0675	PARTICLE FILTER RELATIVE PRESSURE SENSOR
0071	ALTERNATOR TYPE	0676	EGR VALVE PROGRAMMING
0072	WIPER BLADE INVERTED	0677	CRUISE CONTROL/SPEED LIMITER PROGRAMMING
0073	READ VIN	0678	INJECTOR ADAPTIVES NO. 4
0074	START OBD TEST: O2 SENSORS	0679	INJECTOR ADAPTIVES NO. 1
0075	START OBD TEST: CATALYTIC CONVERTER	0680	INJECTOR ADAPTIVES NO. 2
0076	PRESSURE REGULATION ADAPTIVES	0681	INJECTOR ADAPTIVES NO. 3
0077	SELECTION OF VALVE SET	0682	INJECTOR ADAPTIVES
0078	TESTING CARD PRESENTED	0683	PARAMETRAGE PRIVE 39
0079	PROGRAMMING MODE 2	0684	PARAMETRAGE PRIVE 40
0080	PROGRAMMING ROUTINE	0685	PARAMETRAGE PRIVE 42
0081	CONFIRM PROGRAMMING	0686	PARAMETRAGE PRIVE 43
0082	ABANDON PROGRAMMING	0687	PARAMETRAGE PRIVE 44
0083	AIR CONDITIONING TYPE	0688	PARAMETRAGE PRIVE 45
0084	CONFIGURATION PRIVEE 40	0689	PARAMETRAGE PRIVE 46
0085	CALIBRATION	0690	PARAMETRAGE PRIVE 47
0086	CONFIGURATION PRIVEE 1	0691	PARAMETRAGE PRIVE 48
0087	VIN ENTRY IN CARD	0692	PARAMETRAGE PRIVE 49
0088	HANDS-FREE FUNCTION	0693	PARAMETRAGE PRIVE 50
0089	DEADLOCKING	0694	PARAMETRAGE PRIVE 52
0090	CONFIGURATION PRIVEE 45	0695	PARAMETRAGE PRIVE 51
0091	RAIN SENSOR	0696	PARAMETRAGE PRIVE 53
0092	LIGHT SENSOR	0697	PARAMETRAGE PRIVE 54
0093	DAYTIME RUNNING LIGHTS	0698	PARAMETRAGE PRIVE 55
0094	ILLUMINATE HAZARD LAMPS UPON IMPACT	0699	PARAMETRAGE PRIVE 56
0095	AUTOMATIC RELOCKING	0700	PARAMETRAGE PRIVE 57
0096	CONFIGURATION PRIVEE 25	0701	PARAMETRAGE PRIVE 58
0097	FRONT FOG LIGHTS	0702	PARAMETRAGE PRIVE 59
0098	TYRE PRESSURE MONITOR FUNCTION	0703	PARAMETRAGE PRIVE 60

Special_Function

index	Specil Function Name	index	Specil Function Name
0099	PAX SYSTEM TYPE TYRE	0704	PARAMETRAGE PRIVE 61
0100	HAZARD WARNING LIGHTS ILLUMINATION BY ABS	0705	PARAMETRAGE PRIVE 62
0101	CONFIGURATION PRIVEE 2	0706	PARAMETRAGE PRIVE 63
0102	WINDSCREEN TYPE	0707	PARAMETRAGE PRIVE 64
0103	ELECTRIC CHILD SAFETY	0708	PARAMETRAGE PRIVE 65
0104	CONFIGURATION PRIVEE 26	0709	PARAMETRAGE PRIVE 66
0105	SEE-ME-HOME LIGHTING	0710	PARAMETRAGE PRIVE 67
0106	CONFIGURATION PRIVEE 3	0711	PARAMETRAGE PRIVE 68
0107	SELECTIVE OPENING OF DOORS	0712	PARAMETRAGE PRIVE 69
0108	CONFIGURATION PRIVEE 27	0713	PARAMETRAGE PRIVE 70
0109	CONFIGURATION PRIVEE 4	0714	PARAMETRAGE PRIVE 71
0110	CONFIGURATION PRIVEE 28	0715	PARAMETRAGE PRIVE 72
0111	CONFIGURATION PRIVEE 5	0716	PARAMETRAGE PRIVE 77
0112	CONFIGURATION PRIVEE 6	0717	PARAMETRAGE PRIVE 245
0113	CONFIGURATION PRIVEE 7	0718	PARAMETRAGE PRIVE 246
0114	CONFIGURATION PRIVEE 8	0719	PARAMETRAGE PRIVE 82
0115	CONFIGURATION PRIVEE 9	0720	PARAMETRAGE PRIVE 83
0116	CONFIGURATION PRIVEE 10	0721	PARAMETRAGE PRIVE 84
0117	CONFIGURATION PRIVEE 11	0722	PARAMETRAGE PRIVE 85
0118	CONFIGURATION PRIVEE 12	0723	PARAMETRAGE PRIVE 86
0119	CONFIGURATION PRIVEE 13	0724	PARAMETRAGE PRIVE 87
0120	CONFIGURATION PRIVEE 14	0725	PARAMETRAGE PRIVE 88
0121	CONFIGURATION PRIVEE 15	0726	PARAMETRAGE PRIVE 89
0122	CONFIGURATION PRIVEE 16	0727	PARAMETRAGE PRIVE 247
0123	CONFIGURATION PRIVEE 17	0728	PARAMETRAGE PRIVE 91
0124	CONFIGURATION PRIVEE 18	0729	PARAMETRAGE PRIVE 92
0125	CONFIGURATION PRIVEE 19	0730	PARAMETRAGE PRIVE 93
0126	CONFIGURATION PRIVEE 20	0731	PARAMETRAGE PRIVE 94
0127	CONFIGURATION PRIVEE 21	0732	PARAMETRAGE PRIVE 95
0128	CONFIGURATION PRIVEE 22	0733	PARAMETRAGE PRIVE 96
0129	CONFIGURATION PRIVEE 23	0734	PARAMETRAGE PRIVE 97
0130	CONFIGURATION PRIVEE 24	0735	PARAMETRAGE PRIVE 98
0131	CONFIGURATION PRIVEE 29	0736	PARAMETRAGE PRIVE 99
0132	CONFIGURATION PRIVEE 30	0737	PARAMETRAGE PRIVE 100
0133	CONFIGURATION PRIVEE 31	0738	PARAMETRAGE PRIVE 101
0134	CONFIGURATION PRIVEE 32	0739	PARAMETRAGE PRIVE 102
0135	CONFIGURATION PRIVEE 33	0740	PARAMETRAGE PRIVE 103
0136	CONFIGURATION PRIVEE 34	0741	PARAMETRAGE PRIVE 104
0137	CONFIGURATION PRIVEE 35	0742	PARAMETRAGE PRIVE 105
0138	CONFIGURATION PRIVEE 36	0743	PARAMETRAGE PRIVE 106
0139	ERASE COMPUTER CONFIGURATION	0744	PARAMETRAGE PRIVE 107
0140	WRITE POSITION AND VALVE CODE	0745	PARAMETRAGE PRIVE 108
0141	SELECTION BLOC V. I. N. CARTE (PRIVE)	0746	PARAMETRAGE PRIVE 109
0142	WRITE RECOMMENDED PRESSURES	0747	PARAMETRAGE PRIVE 248
0143	ENTER RECOMMENDED PRESSURES	0748	PARAMETRAGE PRIVE 111
0144	READ VALVE SET AND MEMORISED CODES	0749	PARAMETRAGE PRIVE 112
0145	PROGRAMMING THE CODES OF THE FOUR VALVES	0750	PARAMETRAGE PRIVE 114
0146	SPARE	0751	PARAMETRAGE PRIVE 115
0147	CARD TESTING	0752	PARAMETRAGE PRIVE 116

Special_Function

index	Specil Function Name	index	Specil Function Name
0148	PROGRAM BODY COMPUTER	0753	PARAMETRAGE PRIVE 117
0149	COMMANDE PRIVEE 3	0754	PARAMETRAGE PRIVE 118
0150	CARD ALLOCATION	0755	PARAMETRAGE PRIVE 119
0151	UCH TYPE	0756	PARAMETRAGE PRIVE 120
0152	HEATING RESISTOR TYPE	0757	PARAMETRAGE PRIVE 121
0153	COMMANDE PRIVEE 4	0758	PARAMETRAGE PRIVE 122
0154	COMMANDE PRIVEE 7	0759	PARAMETRAGE PRIVE 123
0155	COMMANDE PRIVEE 5	0760	PARAMETRAGE PRIVE 124
0156	COMMANDE PRIVEE 6	0761	PARAMETRAGE PRIVE 125
0157	COMMANDE PRIVEE 11	0762	PARAMETRAGE PRIVE 126
0158	COMMANDE PRIVEE 12	0763	PARAMETRAGE PRIVE 127
0159	VEHICLE PARAMETERS	0764	PARAMETRAGE PRIVE 128
0160	SPEEDO INDEX	0765	PARAMETRAGE PRIVE 130
0161	CHECK TARGET TEETH	0766	PARAMETRAGE PRIVE 131
0162	BLEED HYDRAULIC UNIT AND BRAKING CIRCUITS	0767	PARAMETRAGE PRIVE 132
0163	PREVENTION OF STOP LIGHT AUTO ILLUMINATION	0768	PARAMETRAGE PRIVE 133
0164	AUTO STOP LIGHTS ILLUMINATION AUTHORISATION	0769	PARAMETRAGE PRIVE 134
0165	ESP AUTOMATIC RECONNECTION THRESHOLD	0770	PARAMETRAGE PRIVE 135
0166	PARAMETRAGE PRIVE 4	0771	PARAMETRAGE PRIVE 136
0167	COMPUTER ADDRESS	0772	PARAMETRAGE PRIVE 137
0168	CONVERTER LOCK UP ADAPTIVE	0773	PARAMETRAGE PRIVE 138
0169	AUTO-ADAPTIVES	0774	PARAMETRAGE PRIVE 139
0170	ENGINE TORQUE CONTROL FUNCTION	0775	PARAMETRAGE PRIVE 140
0171	AIR CONDITIONING CONNECTION FAULT FINDING	0776	PARAMETRAGE PRIVE 141
0172	LEVER LOCKING CONNECTION FAULT FINDING	0777	PARAMETRAGE PRIVE 142
0173	NOTE OIL WEAR COUNTER	0778	PARAMETRAGE PRIVE 143
0174	WRITE TRANSMISSION OIL CHANGE DATE	0779	PARAMETRAGE PRIVE 144
0175	NUMBER OF CYLINDERS CONFIGURATION	0780	PARAMETRAGE PRIVE 145
0176	J WITHOUT SIDE AIRBAGS	0781	PARAMETRAGE PRIVE 146
0177	J WITH SIDE AB W/O REAR CHEST AB	0782	PARAMETRAGE PRIVE 147
0178	SIDE ON WHICH STEERING WHEEL FITTED	0783	PARAMETRAGE PRIVE 148
0179	PASSENGER'S SEAT BUCKLE SENSOR	0784	PARAMETRAGE PRIVE 149
0180	PASSENGER PRESENCE DETECTION SENSOR	0785	PARAMETRAGE PRIVE 150
0181	DRIVER' SIDE REAR FRONTAL AIRBAG	0786	PARAMETRAGE PRIVE 151
0182	PASSENGER SIDE REAR FRONTAL AIRBAG	0787	PARAMETRAGE PRIVE 152
0183	DRIVER'S SIDE REAR STRAP SENSOR	0788	PARAMETRAGE PRIVE 153
0184	PASSENGER SIDE REAR STRAP SENSOR	0789	PARAMETRAGE PRIVE 154
0185	J WITH SIDE AB +REAR CHEST AIRBAGS	0790	PARAMETRAGE PRIVE 155
0186	E WITHOUT SIDE AIRBAGS	0791	PARAMETRAGE PRIVE 156
0187	E WITH SIDE AIRBAGS	0792	PARAMETRAGE PRIVE 157
0188	K/L WITHOUT SIDE AIRBAGS	0793	PARAMETRAGE PRIVE 158
0189	K/L WITH F CHEST + CURT AIRBAGS	0794	PARAMETRAGE PRIVE 159
0190	K/L WITH F/R CHEST + CURT AIRBAGS	0795	PARAMETRAGE PRIVE 160
0191	PULLING CORRECTION	0796	PARAMETRAGE PRIVE 161
0192	PULLING CORRECTION PROGRAM	0797	PARAMETRAGE PRIVE 162
0193	AUTOMATIC HANDBRAKE	0798	PARAMETRAGE PRIVE 163
0194	VEHICLE CONFIGURATION	0799	PARAMETRAGE PRIVE 164
0195	VEHICLE WEIGHTS	0800	PARAMETRAGE PRIVE 165
0196	PARAMETRAGE PRIVE 5	0801	PARAMETRAGE PRIVE 166

Special_Function

index	Specil Function Name	index	Specil Function Name
0197	COMPUTER CALIBRATION AND OPERATION	0802	PARAMETRAGE PRIVE 167
0198	PARAMETRAGE PRIVE 6	0803	PARAMETRAGE PRIVE 168
0199	SLOPE INITIALIZATION	0804	PARAMETRAGE PRIVE 169
0200	WRITE CLUTCH PEDAL PROGRAMMING	0805	PARAMETRAGE PRIVE 170
0201	SAVE CLUTCH PEDAL PROGRAMMING	0806	PARAMETRAGE PRIVE 171
0202	WITH ROLL BARS	0807	PARAMETRAGE PRIVE 172
0203	WITHOUT ROLL BARS	0808	PARAMETRAGE PRIVE 173
0204	ROLL BARS	0809	PARAMETRAGE PRIVE 174
0205	TIGHTEN	0810	PARAMETRAGE PRIVE 175
0206	PULLING CORRECTION TYPE	0811	PARAMETRAGE PRIVE 176
0207	ENGINE TYPE	0812	PARAMETRAGE PRIVE 177
0208	HEADLIGHT WASHERS	0813	PARAMETRAGE PRIVE 178
0209	CHILDPROOF LOCK	0814	PARAMETRAGE PRIVE 179
0210	3-BUTTON KEY	0815	PARAMETRAGE PRIVE 180
0211	DRIVING TYPE	0816	PARAMETRAGE PRIVE 181
0212	TAILGATE FLAP	0817	PARAMETRAGE PRIVE 182
0213	NEW VEHICLE STORAGE MODE DEACTIVATION	0818	PARAMETRAGE PRIVE 183
0214	KEY ASSIGNMENT	0819	PARAMETRAGE PRIVE 184
0215	PROGRAMMING THE INJECTION IMMOBILISER CODE	0820	PARAMETRAGE PRIVE 129
0216	CHECKING A KEY	0821	PARAMETRAGE PRIVE 113
0217	ESP SENSOR PROGRAMMING	0822	PARAMETRAGE PRIVE 185
0218	LEFT HAND DRIVE / 4 CYLINDER CONFIGURATION	0823	ADAPTIVES AFTER REGENERATING PARTICLE FILTER
0219	LEFT HAND DRIVE / 6 CYLINDER CONFIGURATION	0824	FLYWHEEL TARGET PROGRAMMING
0220	RIGHT HAND DRIVE / 4 CYLINDER CONFIGURATION	0825	RICHNESS REGULATION PROGRAMMING
0221	LEFT HAND DRIVE / DIESEL CONFIGURATION	0826	PINKING SENSOR PROGRAMMING
0222	RIGHT HAND DRIVE / 6 CYLINDER CONFIGURATION	0827	IGNITION COIL ADAPTIVE
0223	RIGHT HAND DRIVE / DIESEL CONFIGURATION	0828	CAMSHAFT SENSOR PROGRAMMING
0224	LANGUAGE VERSION.	0829	PARAMETRAGE PRIVE 41
0225	LIGHTS AUTOMATIC ILLUMINATION	0830	PARAMETRAGE PRIVE 73
0226	PARTICLE FILTER	0831	PARAMETRAGE PRIVE 74
0227	ADAC DISPLAY TYPE	0832	PARAMETRAGE PRIVE 75
0228	FUEL SENDER CALIBRATION (DOI).	0833	PARAMETRAGE PRIVE 76
0229	UPDATE ODOMETER	0834	PARAMETRAGE PRIVE 78
0230	OIL CHANGE RANGE: CURRENT VALUE IN KM	0835	PARAMETRAGE PRIVE 79
0231	OIL CHANGE RANGE: CURRENT VALUE IN MONTHS	0836	PARAMETRAGE PRIVE 80
0232	FUEL SENDER CALIBRATION (EUROPE)	0837	PARAMETRAGE PRIVE 81
0233	ORIGINALLY FITTED PERIMETRIC PROTECTION	0838	PARAMETRAGE PRIVE 90
0234	'VALET' CARD FUNCTION	0839	RAIL PRESSURE SENSOR ADAPTIVES
0235	DTC UNIQUE	0840	FUEL FLOW REGULATOR
0236	WITH AIR BAG	0841	PARAMETRAGE PRIVE 243
0237	WITHOUT AIR BAG	0842	PARAMETRAGE PRIVE 110
0238	WITH ABS	0843	PARAMETRAGE PRIVE 242
0239	NO ABS	0844	REAR CAMERA
0240	PETROL INJECTION	0845	REVERSING CAMERA CALIBRATION
0241	DIESEL INJECTION	0846	COMPUTER PROGRAMMING/INITIALIZATION
0242	WITH SELF LEVELLING SUSPENSION	0847	PROGRAMMING OF NO LOAD AND FULL LOAD POSITIONS
0243	WITHOUT SELF LEVELLING SUSPENSION	0848	PARAMETRAGE PRIVE 186
0244	WITH AUTOMATIC TRANSMISSION	0849	PARAMETRAGE PRIVE 187
0245	WITHOUT AUTOMATIC TRANSMISSION	0850	PARAMETRAGE PRIVE 188

Special_Function

index	Specil Function Name	index	Specil Function Name
0246	WITH CATALYTIC CONVERTER	0851	PARAMETRAGE PRIVE 189
0247	WITHOUT CATALYTIC CONVERTER	0852	PARAMETRAGE PRIVE 190
0248	ELECTRICAL DAMPER AT STOP	0853	PARAMETRAGE PRIVE 191
0249	ENTERING THE STEERING RACK END STOPS	0854	PARAMETRAGE PRIVE 249
0250	STEERING RACK LENGTH	0855	PARAMETRAGE PRIVE 244
0251	DYNAMIC CORRECTION	0856	PARAMETRAGE PRIVE 237
0252	AUTOMATIC FOLD-DOWN HEADLIGHTS	0857	PARAMETRAGE PRIVE 238
0253	DIPPED HEADLIGHTS RAISE	0858	PARAMETRAGE PRIVE 239
0254	SIGNATURE	0859	PARAMETRAGE PRIVE 240
0255	CORNERING LIGHTS	0860	PARAMETRAGE PRIVE 241
0256	HEADLIGHT HEAT TIMER	0861	ACTIVATE MAINTENANCE MODE
0257	INDICATOR MANAGEMENT FOR CORNERING LIGHTS	0862	DEACTIVATE MAINTENANCE MODE
0258	SYSTEM INITIALIZATION	0863	WITHOUT INHIBITION SWITCH
0259	CORRECTION MOTORS	0864	OIL SERVICE INTERVAL IN DAYS
0260	DISTANCE BEFORE NEXT OIL CHANGE CONFIGURATION	0865	RADIO
0261	ENGINE IMMOBILISER 2	0866	LIGHTING
0262	DRIVER LAP STRAP PRETENSIONER	0867	VEHICLE IDENTIFIER
0263	PASSENGER LAP STRAP PRETENSIONER	0868	SPEAKER
0264	FRONT SEAT BELT RETRACTORS	0869	CONSTRUCTOR/MANUFACTURER
0265	W FR CHEST AIRBAGS W/OUT HEAD-LVL AIRBAGS	0870	UNIT OF VOLUME
0266	WITHOUT SIDE AIRBAGS	0871	ACCESS/STARTER TYPE
0267	WITH FR CHEST AIRBAGS+HEAD-LEVEL AIRBAGS	0872	PROGRAMMING IMMOBILISER CODE PEB
0268	LANGUAGE	0873	AVERAGE AIR TEMPERATURE
0269	RADIO GENERATION	0874	PREHEATER UNIT
0270	SERIAL LINK TEST	0875	PROPORTIONAL RICHNESS SENSOR PROGRAMMING
0271	MICROPHONE TEST	0876	PARAMETRAGE PRIVE 250
0272	AUDIO LINKS TEST	0877	MODUS LONG FUEL SENDER CALIBRATION (EUROPE)
0273	CONTROL PANEL TYPE	0878	MODUS FUEL SENDER CALIBRATION (EUROPE)
0274	VEHICLE ENGINE TYPE	0879	SEAT SLIDE AMOUNT SET
0275	WITH RADIO DISPLAY	0880	HANDS-FREE CARDS LOW BATTERY COUNTER
0276	WITHOUT RADIO DISPLAY	0881	SELF-TEST
0277	LEFT HAND DRIVE	0882	MEMORY ERASE
0278	RIGHT HAND DRIVE	0883	PROGRAMMING
0279	OIL LEVEL DISPLAYED 20sec	0884	INTERIOR AERIAL 2 TEST
0280	OIL LEVEL DISPLAYED 20 sec WHEN ADAC PRESSED	0885	HANDS-FREE CARD READING
0281	WITH HAZARD LAMPS RECALL ON TRF	0886	INTERIOR AERIAL 1 TEST
0282	WITHOUT HAZARD LAMPS RECALL ON TRF	0887	EXTERNAL BOOT AERIAL TEST
0283	GEOGRAPHICAL ZONE	0888	FRONT LEFT-HAND EXTERNAL AERIAL TEST
0284	ENTER VIN CODE	0889	FRONT RIGHT-HAND EXTERNAL AERIAL TEST
0285	READING THE VALVE SET AND VALVE CODES	0890	PROGRAMMING THE HANDS-FREE CARD
0286	PROGRAMMING A VALVE CODE	0891	LONG VEHICLE
0287	DUAL INPUT (PRIVATE) CHILDPROOF LOCK	0892	TIMED LIGHTING SUPPLY
0288	ECU MEMORY	0893	LONGITUDINAL ACCELERATION SENSOR
0289	INJECTOR CYLINDER 1	0894	OIL SERVICE INTERVAL IN MILES
0290	PARAMETRAGE PRIVE 8	0895	NAVIGATION
0291	PARAMETRAGE PRIVE 15	0896	DRIVER'S FRONT INERTIA REEL
0292	PARAMETRAGE PRIVE 13	0897	PASSENGER'S FRONT INERTIA REEL
0293	PARAMETRAGE PRIVE 14	0898	GRADUAL SWITCHING ON AND OFF OF COURTESY LIGHT
0294	PARAMETRAGE PRIVE 18	0899	C-BOX

Special_Function

index	Specil Function Name	index	Specil Function Name
0295	PARAMETRAGE PRIVE 16	0900	ALCOHOL LEVEL PROG.
0296	PARAMETRAGE PRIVE 19	0901	TYPE OF PARKING BRAKE
0297	INJECTOR CYLINDER 2	0902	FREE SHIFT
0298	INJECTOR CYLINDER 3	0903	FREE SHIFT DISPLAY
0299	INJECTOR CYLINDER 4	0904	POINTER ANIMATION
0300	DECREMENT IDLE SPEED	0905	DAYTIME BACKLIGHTS
0301	INCREMENT OF IDLE SPEED	0906	FAST IDLE SPEED MODIFICATION
0302	PARAMETRAGE PRIVE 9	0907	CONFIGURING THE MULTIMEDIA COMPUTER
0303	PARAMETRAGE PRIVE 7	0908	EXHAUST AIR FLAP PROGRAMMING
0304	PARAMETRAGE PRIVE 17	0909	IDLE SPEED REFERENCE
0305	PARAMETRAGE PRIVE 20	0910	COMPRESSOR FEEDBACK
0306	PARAMETRAGE PRIVE 11	0911	GSM ANTENNA
0307	PARAMETRAGE PRIVE 12	0912	TACHOGRAPH
0308	PARAMETRAGE PRIVE 21	0913	ABS/ESP
0309	PARAMETRAGE PRIVE 10	0914	TYRES
0310	RESET ADAPTIVE VALUE	0915	PARAMETRAGE PRIVE 192
0311	FUEL SUPPLY PREVENTION	0916	PARAMETRAGE PRIVE 194
0312	HIGH PRESSURE FUEL CIRCUIT FAULT FINDING	0917	PARAMETRAGE PRIVE 195
0313	CUSTOMER SETTINGS AND DETAILS	0918	PARAMETRAGE PRIVE 196
0314	NETHERLANDS LEGISLATION	0919	COMPUTER CONFIGURATION
0315	SEAT BELT REMINDER BUZZER	0920	GSM CONNECTIVITY
0316	TYRE PRESSURE UNITS	0921	GSM ANTENNA CIRCUIT
0317	VOICE SYNTHESISER	0922	SHIFT DRUM REFERENCE POSITION
0318	CRUISE CONTR./SP. LIMIT. SPEED DIFF.	0923	PROGRAMME CLUTCH POSITION
0319	UCH	0924	PROGRAM CLUTCH 1 ADJUSTEMENT
0320	GAS RESERV. CAPAC.	0925	PROGRAM CLUTCH ASSEMBLY
0321	TANK CAPACITY	0926	PROGRAM CLUTCH 2 ADJUSTEMENT
0322	FUEL GAUGE CALIBRATION	0927	COMPUTER RESET
0323	HEATED WINDSCREEN	0928	MODIFICATION OF PARAMETERS AFTER INITIALIZATION
0324	EVAPORATOR TEMPERATURE SENSOR	0929	COMMANDE PRIVEE 13
0325	TYPE OF POWER STEERING	0930	COMMANDE PRIVEE 14
0326	COMPRESSOR TYPE	0931	COMMANDE PRIVEE 15
0327	DRIVE RATIO	0932	COMMANDE PRIVEE 16
0328	FAULT/S MEMORISED	0933	COMMANDE PRIVEE 17
0329	ACTUATORS SEQUENTIAL CONTROL	0934	COMMANDE PRIVEE 18
0330	CHANGE IN TRIGGERING LIMIT	0935	COMMANDE PRIVEE 19
0331	WITH TIMED COURTESY LIGHT	0936	COMMANDE PRIVEE 20
0332	WITHOUT TIMED COURTESY LIGHT	0937	COMMANDE PRIVEE 21
0333	P9X AT	0938	COMMANDE PRIVEE 22
0334	P9X MANUAL	0939	COMMANDE PRIVEE 23
0335	DISTANCE REGULATOR	0940	COMMANDE PRIVEE 24
0336	V4Y AUTOMATIC GEARBOX	0941	COMMANDE PRIVEE 25
0337	V4Y MANUAL	0942	MEMORISATION OF SPEEDS
0338	OTHER AT	0943	FRONT LEFT-HAND SEAT BELT SENSOR
0339	OTHER MANUAL	0944	FRONT RIGHT-HAND SEAT BELT SENSOR
0340	DISTANCE BEFORE NEXT OIL CHANGE	0945	SDO
0341	ENGINE/GEARBOX TYPE	0946	ANGLE OF ASSEMBLY
0342	TEMPERATURE UNITS	0947	VACUUM PUMP AGEING COUNTER
0343	NAVIGATION SYSTEM	0948	TRACTION BATTERY LOCK

Special_Function

index	Specil Function Name	index	Specil Function Name
0344	INCREASE FUEL WARNING THRESHOLD	0949	FAN ASSEMBLY
0345	ABS/ESP CALIBRATION	0950	CHARGE WATER PUMP
0346	TRANSVERSE ACCELERATION SENSOR	0951	DRIVING WATER PUMP
0347	PRESSURE SENSOR	0952	AIR CONDITIONING COMPRESSOR
0348	STEERING WHEEL ANGLE SENSOR	0953	AUTONOMY BATTERY
0349	PROVISIONAL CONTROL 1	0954	INSULATION FAULT DETECTOR CHECK
0350	PROVISIONAL CONTROL 2	0955	ROTOR POSITION SENSOR LEARNING
0351	PROVISIONAL CONTROL 3	0956	ANGLE RESISTOR LEARNING
0352	COMP CONFIGURATION	0957	ROTOR RESISTOR LEARNING
0353	LOCK PASSENGER'S FRONT AIR BAG	0958	STARTING AUTHORIZATION BY LBC
0354	UNLOCK PASSENGER'S FRONT AIR BAG	0959	WRITE B. I. N.
0355	CONFIGURATION OF SYSTEM COMPONENTS	0960	MAINTENANCE AUTONOMY INTERVAL IN KM
0356	IGNITION MODULE CONFIGURATION	0961	MAINTENANCE AUTONOMY INTERVAL IN MONTHS
0357	SIDE SENSOR CONFIGURATION	0962	MAINTENANCE AUTONOMY:CURRENT VALUE IN KM
0358	OBD MEMORY	0963	MAINTENANCE AUTONOMY:CURRENT VALUE MONTH
0359	CHECK MOTOR TORQUE BY ABS	0964	LOW PRESSURE EGR VALVE PROGRAMMING
0360	AIR CONDITIONING WITH WIRE CONNECTION	0965	ADAPTIVES ON AIR INTAKE FLAP FAULT
0361	SELECTOR LEVER LOCKING	0966	AIR FLOWMETER PROGRAMMING
0362	REMOTE CONTROL CRUISE CONTROL	0967	MANIFOLD PRESSURE SENSOR PROGRAMMING
0363	ADAPTIVES AFTER REPLACING CABIN FILTER	0968	PARTICLE FILTER PRESSURE DIFF. SENSOR
0364	STOP FUEL SUPPLY PREVENTION	0969	INJECTION PUMP ADAPTATIVES
0365	STOP ELECTRICAL CONSUMER PREVENTION	0970	FUEL PUMP PROGRAMMING
0366	CABIN FILTER REGENERATION	0971	SWIRL FLAP
0367	ERASE OBD FAULT MEMORY	0972	SWIRL FLAP PROGRAMMING
0368	TL4	0973	TURBOCHARGER PROGRAMMING
0369	CHECK UPSTREAM O2 SENSOR	0974	NUMBER OF STARTING CYCLES
0370	POWER ASSISTED STEERING	0975	BOOST PRESSURE SENSOR PROGRAMMING
0371	THERMOPLUNGERS	0976	CATALYTIC CONVERTER
0372	CRUISE CONTROL	0977	PARAMETRAGE PRIVE 218
0373	ERASE STORED MISALIGNMENT	0978	PARAMETRAGE PRIVE 219
0374	STEERING ANGLE OFFSET	0979	PARAMETRAGE PRIVE 220
0375	KM	0980	PARAMETRAGE PRIVE 213
0376	MILES	0981	PARAMETRAGE PRIVE 214
0377	RADAR ALIGNMENT BY GEOMETRY EQUIPMENT	0982	PARAMETRAGE PRIVE 215
0378	RADAR ALIGNMENT BY LASER	0983	PARAMETRAGE PRIVE 216
0379	ERASE OVERHEATING COUNTER	0984	PARAMETRAGE PRIVE 217
0380	ERASE INCORRECT CRANKING COUNTER	0985	NUMBER OF STARTING 1
0381	AIR CONDITIONING	0986	NUMBER OF STARTING 2
0382	ERASE IDLE REGULATION ADAPTIVES	0987	NUMBER OF STARTING 3
0383	AIR PATH PROGRAMMING	0988	NUMBER OF STARTING 4
0384	AC COLD LOOP IN THE INJECTION	0989	PARAMETRAGE PRIVE 193
0385	WITH AUTONOMOUS SPEED REGULATOR	0990	PARAMETRAGE PRIVE 197
0386	UPC COMP. TYPE	0991	PARAMETRAGE PRIVE 198
0387	RAIN/LIGHT SENSOR	0992	PARAMETRAGE PRIVE 199
0388	AUTOMATIC CLOSING OF WINDOWS (BY CARD)	0993	PARAMETRAGE PRIVE 200
0389	EXTERNAL TEMPERATURE SENSOR	0994	PARAMETRAGE PRIVE 202
0390	ONE-TOUCH ELECTRIC WINDOW(S) / SUNROOF	0995	PARAMETRAGE PRIVE 203
0391	REAR SCREEN WIPER	0996	PARAMETRAGE PRIVE 204
0392	VEHICLE SPEED SIGNAL TRANSMITTER	0997	PARAMETRAGE PRIVE 205

Special_Function

index	Specil Function Name	index	Specil Function Name
0393	BODYWORK TYPE	0998	PARAMETRAGE PRIVE 206
0394	CARD/KEY	0999	PARAMETRAGE PRIVE 207
0395	RHEOSTAT PRESENCE	1000	PARAMETRAGE PRIVE 208
0396	CLOCK	1001	PARAMETRAGE PRIVE 209
0397	FOLLOWING TYRE CHANGE	1002	PARAMETRAGE PRIVE 210
0398	SUNROOF	1003	PARAMETRAGE PRIVE 211
0399	VEHICLE FAMILY	1004	PARAMETRAGE PRIVE 212
0400	AUTO LOCKING WARNING SOUND	1005	PARAMETRAGE PRIVE 221
0401	MEMORISING DRIVER'S SEAT POSITION	1006	PARAMETRAGE PRIVE 223
0402	HANDS-FREE START-UP	1007	PARAMETRAGE PRIVE 224
0403	HANDS FREE LOCKING	1008	PARAMETRAGE PRIVE 225
0404	DISCHARGE LAMP	1009	PARAMETRAGE PRIVE 226
0405	LIGHT SENSOR SENSITIVITY	1010	PARAMETRAGE PRIVE 227
0406	INHIBITION OF SELECTIVE DOOR OPENING	1011	PARAMETRAGE PRIVE 228
0407	VALVE SET SELECTION	1012	PARAMETRAGE PRIVE 229
0408	HANDS-FREE SYSTEM TEST	1013	PARAMETRAGE PRIVE 230
0409	AERIAL TEST	1014	PARAMETRAGE PRIVE 231
0410	CHECK CARDS	1015	PARAMETRAGE PRIVE 232
0411	CARD PROGRAMMING	1016	PARAMETRAGE PRIVE 233
0412	CARD BATTERY CHARGE TESTER	1017	PARAMETRAGE PRIVE 234
0413	UCH CONNECTIONS TEST -> CARD READER	1018	PARAMETRAGE PRIVE 235
0414	LOCK LATCH LOCKING	1019	PARAMETRAGE PRIVE 236
0415	COLUMN LOCK IMMOBILISER PROGRAMMING CODE	1020	NUMBER OF STARTING
0416	STATIC TEST	1021	DTC reset
0417	HIGH PRESSURE CIRCUIT LEAK TEST	1022	CALCULATE BATTERY WEAR COUNTERS
0418	TEMPERATURE DISPLAY	1023	STOP&START FUNCTION CONFIGURATION
0419	CARD LOCKING	1024	CORROSION BATTERY COUNTER MEMORISED
0420	CARD REMINDER WARNING	1025	CORROSION BATTERY COUNTER ESTIMATED
0421	OVERSPEED ALARM FOR ARABIA	1026	BATTERY CORROSION COUNTER
0422	POWER-ASSISTED STEERING PROGRAM	1027	BATTERY CYCLE COUNTER MEMORISED
0423	AUTOMATIC LOCKING WHEN DRIVING	1028	BATTERY CYCLE COUNTER ESTIMATED
0424	INTERIOR LIGHTING	1029	BATTERY CYCLE COUNTER
0425	TIMER COURTESY LIGHT	1030	MAINTENANCE AUTONOMY INTERVAL
0426	AUTOMATIC SEAT RECALL	1031	DISTANCE BEFORE NEXT MAINTENANCE
0427	UNLOCKING MODE. DOORS HANDS FREE	1032	TIMED + BATT
0428	DOOR UNLOCKING MODE	1033	EXTERN GPS ANTENNA
0429	CARD ACCUMULATOR CHARGE TESTER	1034	PARAMETRAGE PRIVE 201
0430	COMMANDE PRIVEE 8	1035	PARAMETRAGE PRIVE 222
0431	COMMANDE PRIVEE 9	1036	AMPLIFIER
0432	COMMANDE PRIVEE 10	1037	REMOVABLE ROOF
0433	ENGINE ADAPTIVES	1038	AUXILIARY INPUT
0434	STEERING WHEEL ANGLE OFFSET SENSOR	1039	END OF CRUISE CONTROL/SPEED LIMITER PROGRAMMING
0435	TRANSVERSE ACCELERATION OFFSET SENSOR	1040	LCD DISPLAY FUEL GAUGE CALIBRATION
0436	BRAKE PRESSURE OFFSET SENSOR	1041	ANALOGIC DISPLAY FUEL GAUGE CALIBRATION
0437	CHASSIS WEAR PROGRAMMING	1042	AUTHORISATION OF START-UP BY LBC2
0438	HYDRAULIC BRAKE COMPENSATION	1043	EGR BYPASS PROGRAMMING
0439	OIL PRESSURE WARNING THRESHOLD	1044	AIR CONDITIONING PROGRAMMING
0440	OIL TEMPERATURE MEASUREMENT THRESHOLD	1045	OIL CHANGE COUNTER OFFSET
0441	OIL MEASUREMENT TIMER	1046	WITH AIR CONDITIONING

Special_Function

index	Specil Function Name	index	Specil Function Name
0442	OIL MEASUREMENT	1047	WITHOUT AIR CONDITIONING
0443	OIL SERVICE AND ODOMETRY MILES – KM	1048	WITH OBD
0444	PARKING PROXIMITY SENSOR FUNCTION	1049	WITHOUT OBD
0445	FRONT TONE SETTING	1050	DIESEL/PETROL ENG IMMOB WITHOUT CODED SOL VALVE
0446	FRONT BUZZER VOLUME	1051	DIESEL ENGINE IMMOBILISER
0447	CARAVAN TOWING DISTANCE	1052	PROGRAMMING WITH 1 KEY
0448	CLUTCH INITIAL CLOSED POSITION	1053	PROGRAMMING WITH 2 KEYS
0449	PROGRAMME SLIP POINT	1054	WITH INFRA-RED REMOTE CONTROL
0450	PROGRAMMING SELECTION/ENGAGING ZONES	1055	WITH RADIO FREQUENCY REMOTE CONTROL
0451	PROGRAM CLUTCH OPEN POSITION	1056	END OF KEY REALLOCATION VALIDATION
0452	WRITE CLUTCH INITIAL CLOSED POSITION	1057	ABANDON KEY REALLOCATION
0453	WRITE DATE NEW CLUTCH FITTED	1058	TYPE 1 UNIT
0454	ADDITIONAL HEATING	1059	TYPE 2 UNIT
0455	REAR SHELVES	1060	CODED DIESEL SOLENOID VALVE ENGINE IMMOBILISER
0456	HEATER TYPE	1061	ENGINE IMMOBILISER AUTHORISATION
0457	REAR ACCESS AERIALS	1062	ENGINE IMMOBILISER PROHIBITION
0458	VEH. SPEED AT INITIALIZATION	1063	WITH ALARM
0459	PARKING AID	1064	WITHOUT ALARM
0460	DIRECTIONAL HEADLIGHTS	1065	ENTER ACCESS CODE
0461	LIGHT SENSOR SIGNAL	1066	RESERVE 1
0462	NEUTRAL POSITION PROGRAMMING	1067	IDLE SPEED SETTING INCREMENTATION
0463	EXTERNAL TEMPERATURE	1068	IDLE SPEED SETTING DECREMENTATION
0464	ELECTRIC POWER ASSISTED STEERING	1069	WITH POWER ASSISTED STEERING
0465	Personalised oil change frequency	1070	WITHOUT POWER ASSISTED STEERING
0466	FUEL LEVEL DISPLAY UPDATE	1071	PREHEATING PREVENTION
0467	AUTOMATIC FOLDING OF DOOR MIRRORS	1072	STOP PREHEATING PREVENTION
0468	RAIN/LUMINOSITY SENSOR TYPE	1073	WITHOUT AIR CON. / WITHOUT HEATED WINDSCREEN
0469	RHEOSTAT LIGHTING	1074	WITH AIR CON / WITHOUT HEATED WINDSCREEN
0470	OVERSPEED LIGHT	1075	WITHOUT AIR CON / WITH HEATED WINDSCREEN
0471	AUTOMATIC LIGHTING FUNCTION	1076	WITH AIR CONDITIONING / WITH HEATED WINDSCREEN
0472	AUTOMATIC WIPING FUNCTION	1077	WITH THERMOPLUNGERS
0473	WIPER INTERMITTENT SPEED RING	1078	WITHOUT THERMOPLUNGERS
0474	OPENING ELEMENTS CENTRAL LOCKING	1079	WITH CRUISE CONTROL
0475	KEY TYPE	1080	WITHOUT CRUISE CONTROL
0476	ALARM	1081	WITHOUT SWIRL FLAP
0477	CATALYTIC CONVERTER TEST	1082	CRUISE CTRL/SPEED LIMITER
0478	O2 SENSORS TEST	1083	STATIC/AUTOCONFIGURATION TEST
0479	ERASE AUTO-ADAPTIVE VALUES	1084	ENTER INJECTOR CALIBRATION DATA
0480	MODE NUMBER	1085	SAVE DATA FOR COMPUTER REPLACEMENT
0481	PARTICLE FILTER ADAPTIVES	1086	WRITING DATA TO MEMORY
0482	ENGINE RUNNING.	1087	WRITE DATA AFTER REPLACING COMPUTER
0483	TRACK 1	1088	WITHOUT POWER STEERING ELECTRIC PUMP UNIT
0484	TRACK 2	1089	WITH POWER STEERING ELECTRIC PUMP UNIT
0485	TRACK 5	1090	WITH BOILER
0486	TRACK 6	1091	WITHOUT BOILER
0487	TRACK 7	1092	SPEEDO INDEX PROGRAMMING
0488	TRACK 8	1093	ADAPTIVES ON EGR VALVE FAULT
0489	TRACK 9	1094	SPECIAL NOTES ON COMMERCIAL VEHICLES
0490	TRACK 10	1095	VEHICLE SPEED LIMITATION FUNCTION

Special_Function

index	Specil Function Name	index	Specil Function Name
0491	TRACK 11	1096	RAID FUNCTION AUTHORISATION
0492	TRACK 13	1097	AUTO LOCKING WHEN DRIVING FUNCTION PREVENTION
0493	TRACK 14	1098	WITHOUT VARIABLE INTERMITTENT WIPE
0494	TRACK 15	1099	WITH VARIABLE W' SCREEN WIPER INTERMITTENT
0495	TRACK 16	1100	WITHOUT OVERSPEED WARNING
0496	PROVISIONAL CONTROL 4	1101	WITH OVERSPEED WARNING
0497	IGNITERS IN SERIES CONFIGURATION	1102	WITHOUT RUNNING LIGHTS
0498	BLEEDING THE BRAKING SYSTEM	1103	WITH RUNNING LIGHTS
0499	YAW SPEED SENSOR	1104	WITH AUTOMATIC RE-LOCKING
0500	MAXIMUM VEHICLE SPEED	1105	WITHOUT AUTOMATIC RE-LOCKING
0501	SPEED LIMITER	1106	ONE-TOUCH CENTRAL DOOR LOCKING BUTTON
0502	CYLINDER 5 INJECTOR CODE	1107	ROCKER CENTRAL DOOR LOCKING BUTTON
0503	CYLINDER 6 INJECTOR CODE	1108	WITHOUT HAZARD LIGHTS UPON IMPACT
0504	UCH CONFIGURATION	1109	WITH HAZARD LIGHTS UPON IMPACT
0505	INSTRUMENT PANEL TYPE	1110	RF FUNCTION AUTHORISED
0506	KEY PROGRAMMING	1111	RF FUNCTION NOT AUTHORISED
0507	AUTOMATIC CONFIGURATION	1112	WITH AUTO LOCKING
0508	INHIBITION OF 4-WHEEL DRIVE FUNCTION	1113	WITHOUT AUTO LOCKING
0509	REINSTATEMENT OF 4-WHEEL DRIVE FUNCTION	1114	NON CABRIOLET E64
0510	ASSISTED ENGAGEMENT WHEN STATIONARY	1115	CABRIOLET E64
0511	PREPARATION BEFORE AUTOMATIC CONFIGURATION	1116	WITH ARABIAN OVERSPEED
0512	INITIALIZATION AFTER AUTOMATIC CONFIGURATION	1117	WITHOUT ARABIAN OVERSPEED
0513	OVERSPEED ALARM	1118	J64 4X4
0514	COMPUTER INITIALIZATION	1119	ALL TYPES EXCEPT J64 4X4
0515	OIL CHANGE FREQUENCY	1120	WITH REAR WIPER
0516	BACKUP OF INSTRUMENT PANEL DATA FOR INJECTION	1121	WITHOUT REAR WIPER
0517	WRITING OF INSTRUMENT PANEL DATA FOR INJECTION	1122	WITH REAR WIPER PARK
0518	READ CARD 2 SIGNAL	1123	WITHOUT REAR WIPER PARK
0519	VALET CARD PROGRAMMING PROCEDURE	1124	BII TYPE
0520	READ CARD SIGNAL	1125	WITH TAILGATE MODULE
0521	CONFIGURATION RESERVEE 1	1126	WITHOUT TAILGATE MODULE
0522	CONFIGURATION RESERVEE 2	1127	OPENING REAR SCREEN
0523	CONFIGURATION RESERVEE 3	1128	FIXED REAR SCREEN
0524	CONFIGURATION RESERVEE 4	1129	SDM AIR BAG
0525	CONFIGURATION RESERVEE 5	1130	EC5 AIR BAG
0526	CONFIGURATION RESERVEE 6	1131	VEHICLE TYPE: ALL TYPES EXCEPT JEOP/JEOE
0527	CONFIGURATION RESERVEE 7	1132	VEHICLE TYPE: JEOE OR JEOP
0528	CONFIGURATION RESERVEE 8	1133	WITH ADAC
0529	TYPE OF PROTECTION	1134	WITHOUT ADAC
0530	RESETTING INTERNAL PROTECTION	1135	RAID FUNCTION AUTHORISATION BY DIAG
0531	BATTERY DISCONNECTION UNIT TEST	1136	ERASE COMPUTER MEMORY
0532	COMPUTER REINITIALIZATION	1137	WITH PASSENGER'S AIRBAG
0533	PARAMETRAGE PRIVE 22	1138	WITHOUT PASSENGER'S AIRBAG
0534	CYLINDER FUNCTION FAULT FINDING	1139	WITHOUT AIRBAGS (PRETENSIONERS ONLY)
0535	COMMERCIAL VEHICLE IDLE SPEED MODIFICATION	1140	WITHOUT PASSENGER'S FRONTAL AIRBAG
0536	INTERVAL OF OIL CHANGE (OCS) OXIDATION	1141	WITHOUT PASSENGER SEAT
0537	VEHICLE FUNCTION PROGRAMMING	1142	WITH PASSENGER'S AIRBAGS
0538	PROGRAMMING THROTTLE LIMITS	1143	WITH SIDE AIRBAGS

Special_Function

index	Specil Function Name	index	Specil Function Name
0539	WINDOW WINDER 1 DECONFIGURATION	1144	WITHOUT FUEL PUMP CUT-OUT
0540	WINDOW WINDER 2 DECONFIGURATION	1145	WITH FUEL PUMP CUT-OUT
0541	FROST MANAGEMENT MODE	1146	SIDE SENSORS PROGRAMMING
0542	REINIT. EXTREME COLD REVERSE GEAR ENGAGEMENT	1147	DRIVER'S SIDE REAR INERTIA REEL
0543	LONGITUDINAL ACCELERATION SENSOR OFFSET	1148	PASSENGER'S SIDE REAR INERTIA REEL
0544	TEST PARAMETERS	1149	DRIVER'S SEAT SENSOR
0545	RESET RADIO	1150	REINITIALISE DIRECTION OF MOVEMENT
0546	COUNTRY MODEL	1151	REINITIALISE NO LOAD ACCELERATOR POTENTIOMETER
0547	EXTERNAL COMPONENTS	1152	REINITIALISE FULL LOAD ACCEL POT' TIOMETER
0548	WITH SWIRL FLAP	1153	BATTERY FILLING REINITIALIZATION
0549	TIME FORMAT	1154	MAINTENANCE CHARGE REQUEST
0550	MULTIPLEXED NETWORK CONFIGURATION	1155	CHANGE BATTERY COMPARTMENT
0551	PROGRAMME PNEUMATIC SUSPENSION	1156	WITH RANGE EXTENSION
0552	PROGRAMMING OF SEAT STOPS	1157	WITHOUT RANGE EXTENSION
0553	PARAMETRE PRIVE 1	1158	100 Ah TRACTION BATTERY
0554	PUMP PRESSURE REGULATOR TYPE	1159	CLEAR INSULATION FAULT
0555	PARAMETRAGE PRIVE 23	1160	RANGE EXTENDER
0556	OIL CHANGE INTERVAL (OCS): DILUTION	1161	REINITIALIZATION OF TOTAL CAPACITY
0557	EGR PROGRAMMING	1162	REINITIALISE ELECTRIC GAUGE TO INITIAL VALUE
0558	BOILER	1163	POSITION SENSOR SETTING
0559	VAN FAST IDLE SPEED INCREASE	1164	READ SPEEDO INDEX
0560	VAN FAST IDLE SPEED DECREASE	1165	READ VEHICLE PARAMETERS
0561	CD CHANGER AND AUXILIARY INPUT	1166	FLYWHEEL ANGLE OFFSET READING
0562	PASSENGER'S FRONT AIRBAG	1167	WITH AC (FIXED CAPACITY COMPRESSOR)
0563	DRIVER'S FRONT AIRBAG	1168	WITH AC (VARIABLE CAPACITY COMPRESSOR)
0564	DRIVER'S FRONT BUCKLE PRETENSIONER	1169	CHECK O2 SENSOR
0565	PASSENGER'S FRONT BUCKLE PRETENSIONER	1170	MISFIRING TEST
0566	DRIVER'S FRONT SIDE IMPACT SENSOR	1171	FUEL SYSTEM TEST
0567	PASSENGER'S FRONT SIDE IMPACT SENSOR	1172	MEMORY SAVED
0568	TOXICITY SENSOR	1173	WITH MANUAL GEARBOX
0569	GAS EQUIPMENT	1174	MISFIRE TEST
0570	REV COUNTER	1175	SUPPLY CIRCUIT TEST
0571	ADAC CONFIGURATION	1176	WITH HEATED REAR SCREEN
0572	DRIVE TYPE CONFIGURATION	1177	WITHOUT HEATED REAR SCREEN
0573	SEAT BELT WARNING MODULE	1178	WITH COOLANT SENSOR
0574	CALIBR. ENTRY LEV. INSTR. PANEL FUEL GAUGE	1179	WITHOUT COOLANT SENSOR
0575	CALIBR. MID/TOP RANGE INSTR. PANEL FUEL GAUGE	1180	WITH EVAPORATOR TEMPERATURE SENSOR
0576	RESTART THE COMPUTER	1181	WITHOUT EVAPORATOR TEMPERATURE SENSOR
0577	LEFT-HAND CURTAIN AIRBAG	1182	WITH RECYCLING MOTOR TIMER
0578	RIGHT-HAND CURTAIN AIRBAG	1183	WITHOUT RECYCLING MOTOR TIMER
0579	FRONT LEFT-HAND CHEST-LEVEL SIDE AIRBAG	1184	WITH PERMANENT TYPE CONTROL
0580	FRONT RIGHT-HAND CHEST-LEVEL SIDE AIRBAG	1185	WITH ONE-TOUCH TYPE CONTROL
0581	FRONT LEFT-HAND BUCKLE PRETENSIONER	1186	WITH HARRISON TYPE COMPRESSOR
0582	FRONT RIGHT-HAND BUCKLE PRETENSIONER	1187	WITH SANDEN TYPE COMPRESSOR
0583	REAR LEFT-HAND INERTIA WHEEL	1188	BEHR PROBE CONFIGURATION
0584	REAR RIGHT-HAND INERTIA REEL	1189	HOKURIKU PROBE CONFIGURATION
0585	LEFT-HAND SIDE IMPACT SENSOR	1190	SIEMENS PROBE CONFIGURATION
0586	RIGHT-HAND SIDE IMPACT SENSOR	1191	EEPROM PROBE CONFIGURATION
0587	STORED ENERGY MANAGEMENT DATA	1192	CONFIGURATION WITH RECYCLING FLAP AUTO-SETTING

Special_Function

index	Specil Function Name	index	Specil Function Name
0588	ALTERNATOR DRIVE RATIO	1193	CONFIG. WITHOUT RECYCLING FLAP AUTO-SETTING
0589	ONE-TOUCH ELECTRIC WINDOW(S)	1194	LEFT-HAND DRIVE
0590	BRAKE SHOE WEAR TEST FUNCTION	1195	AVANTIME (F4R) : WITH HEATED WINDSCREEN
0591	HEATED REAR SCREEN CONFIGURATION	1196	AVANTIME (F4R) : WITHOUT HEATED WINDSCREEN
0592	TYPE OF OPENING ELEMENT	1197	AVANTIME (EXCEPT F4R) :WITH HEATED WINDSCR.
0593	RAIN/LUMINOSITY SENSOR SENSITIVITY	1198	AVANTIME (EXPT F4R) :WITHOUT HEATED WINDSCR.
0594	TYPE OF LIGHTING	1199	ESPACE: WITH EVAPORATOR SENSOR
0595	EXTERNAL TEMPERATURE DISPLAY	1200	ESPACE: WITHOUT EVAPORATOR SENSOR
0596	FUEL FILLER FLAP	1201	HAZARD LAMPS RECALL ON TRF
0597	BOOT LOCK FAULT FINDING	1202	ABS TYPE
0598	PASSENGER COMPARTMENT HEATING RESISTOR	1203	RADIOFREQUENCY TYPE
0599	REAR WIPER/REVERSE GEAR CONNECTION	1204	SUNROOF CONTROL UNIT
0600	ENGINE RUNNING SIGNAL	1205	PROGRAMMING OR REALLOCATION OF KEYS
0601	VALVE CODE READING	1206	ADJUST OIL CHANGE COUNTER
0602	SLOPE SENSOR ADJUSTMENT	1207	CRUISE CONTROL/SPEED LIMITER
0603	STEERING ANGLE SENSOR INITIALIZATION	1208	WRITING CONFORMITY
0604	ANTI-THEFT ALARM TRIGGER S/W	1209	OIL CHANGE COUNTER RESET
0605	RAISING OF ELECT. WINDOW (WITH ANTI-PINCH)		